TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 92027 Installation Instructions

10-Inch Black Series LED Light Bar Kit for Honda Talon (2019–2023)

Part number: 92027

trailfortress.com/rough-country-led-light-kit-92027

Scan for fitment, price and install help



HONDA 2020 Talon 10” Slim Light Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
20” Single Row LED Light Kit x1
Driver Side Bumper Bracket x1
Pass Side Bumper Bracket x1

TOOLS NEEDED:
4mm Allen Wrench
14mm Wrench or Socket





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs


INSTALLATION INSTRUCTONS


1. Remove the (3) bolts from the top of the outer bed cap using a 4mm allen wrench. **See Photo 1.**
2. Remove the (2) side push pins in each side of the bed cap. **See Photo 2.**

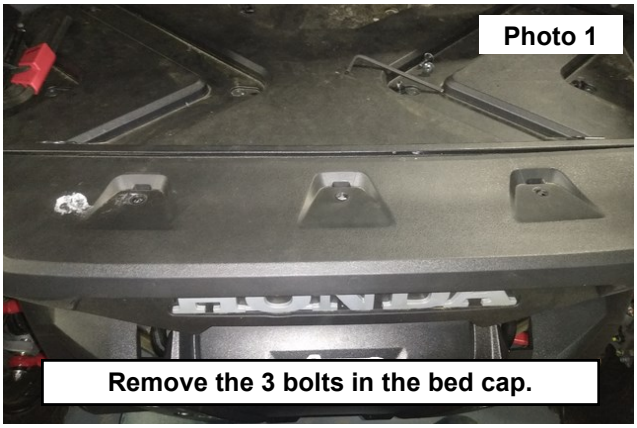

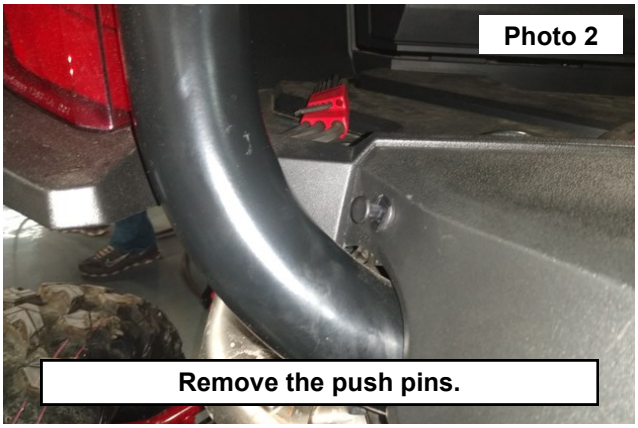


3. Loosen the (2) bolts on each side of the bumper mount using a 14mm wrench. **See Photo 3.**
4. Locate the Driver and Passenger side brackets shown in **Photo 4.**

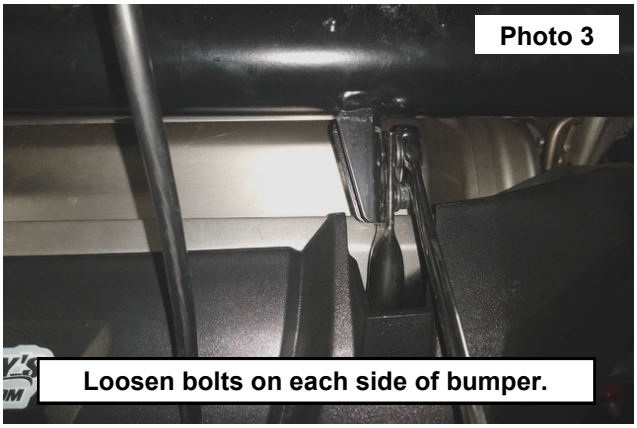

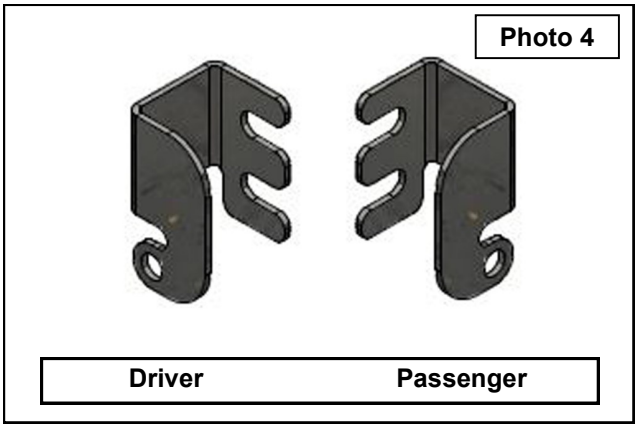



5. Place the light onto the end of the bed facing outward from the UTV. Then install the Drivers side bracket onto the light. **See Photo 5.**
6. Install the passengers side bracket onto the light. **See Photo 6.**

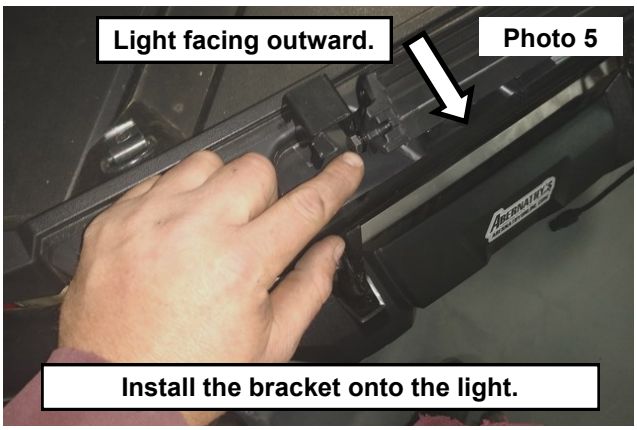





7. Place the light brackets in-between the bumper bracket and the frame mount on the Driver and Passengers side frame mount bumper bolts. **See Photos 7.**
8. Tighten the light brackets on each side using a 14mm wrench. **See Photo 8.**

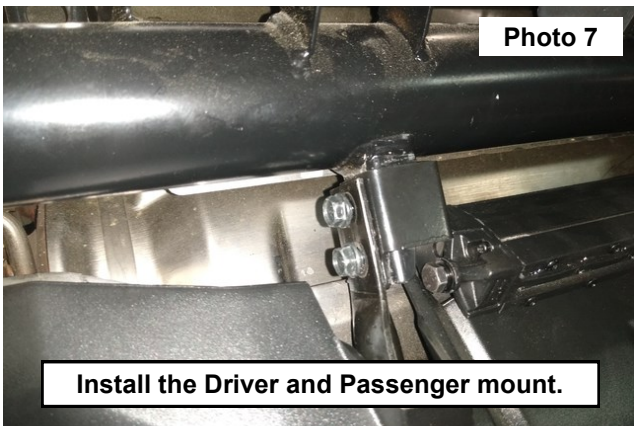

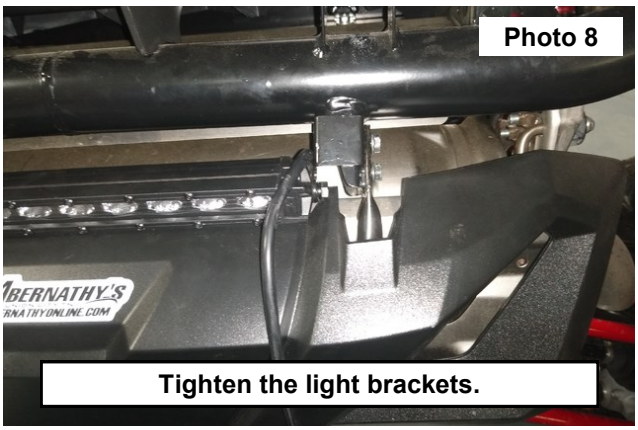

9. Install the wiring harness onto the UTV. Then connect the harness to the battery. **See Photo 9.**
10. Connect the light to the wiring harness.
11. Install the bed cap back onto the rear of the UTV using the (3) retained bolts and a 4mm allen wrench. Install the (2) pins in the outer sides of the bed cap. **See Photo 10.**

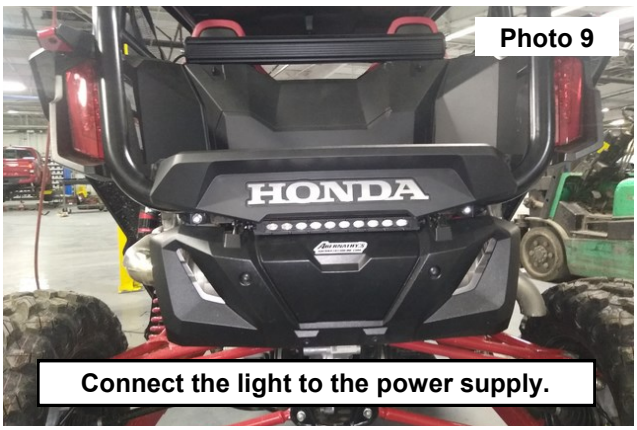

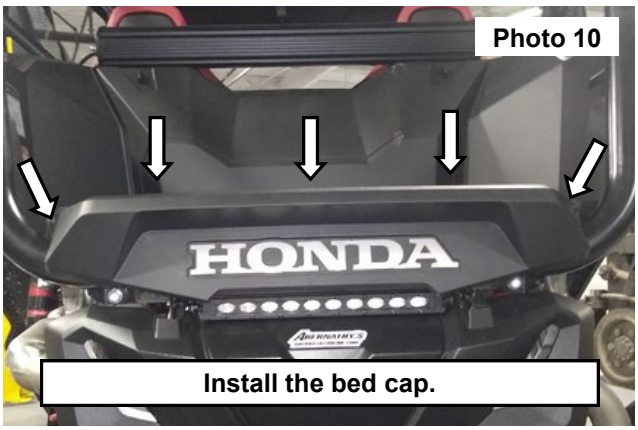



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.