TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 92034 Installation Instructions

2-Inch LED Light Pod & Cage Mount Kit for Honda Talon 1000 (2019-2025)

Part number: 92034

trailfortress.com/rough-country-led-light-kit-92034

Scan for fitment, price and install help




# HONDA 2020 Talon 2” Cube Cage Mount

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
**2” Cube LED Light Kit x1**
**Driver Side Cube Mount Bracket x1**
**Pass Side Cube Mount Bracket x1**

**TOOLS NEEDED:**
**14mm Socket x2**
**Ratchet**

**HARDWARE INCLUDED:**
**10mm-1.25 x 50mm Hex Head Bolt x4**
**3/8” Flat Washer x4**
**Spacers x4**





**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |


## INSTALLATION INSTRUCTONS

1. Remove the (2) lower cage mounting bolts using (2) 14mm sockets. Retain the nuts. **See Photo 1.**
2. Drivers side shown. Locate the mounting bracket and install (2) of the supplied 10mm-1.25 x 50mm Hex Head Bolts and (2) 3/8” Flat Washers in to the bracket. **See Photo 2.**

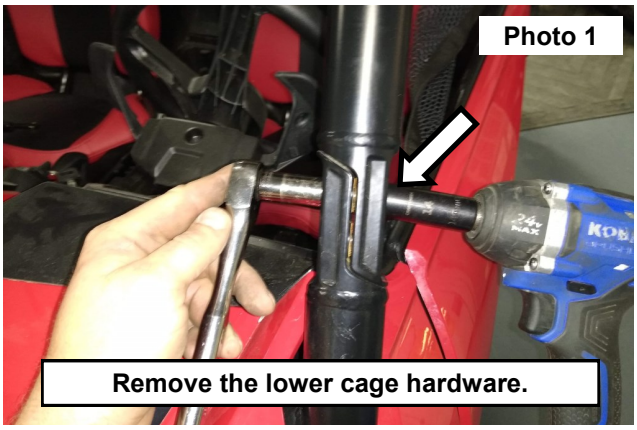

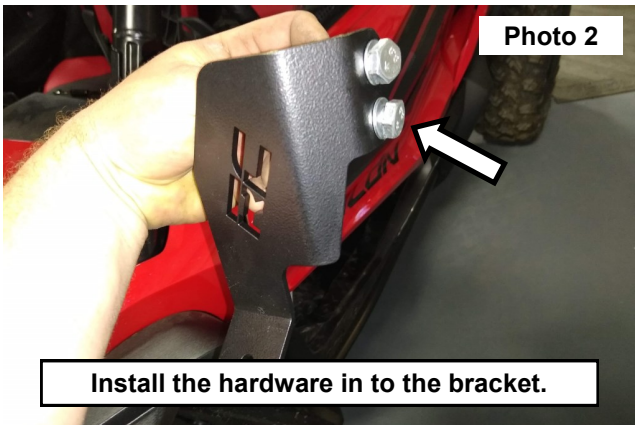

3. Install (2) of the supplied spacers onto the bolts on the inside of the mounting bracket. **See photo 3.**
4. Install the mounting bracket and the bolts into the lower cage mount. Secure using (2) of the supplied 10mm-1.25 x 50mm and (2) 3/8” Flat Washers. Install the retained nuts onto the bolts and tighten using a 14mm sockets. **See Photo 4.**



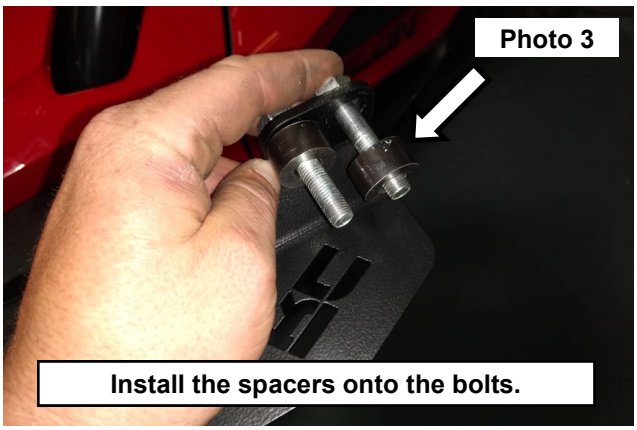



5. Repeat this process on the opposite side of the UTV.
6. Install the 2” cube mounts onto the Driver and Passenger side brackets. **See Photo 5.**
7. Install the wiring harness to the cube lights and connect to the battery / power supply on the UTV.

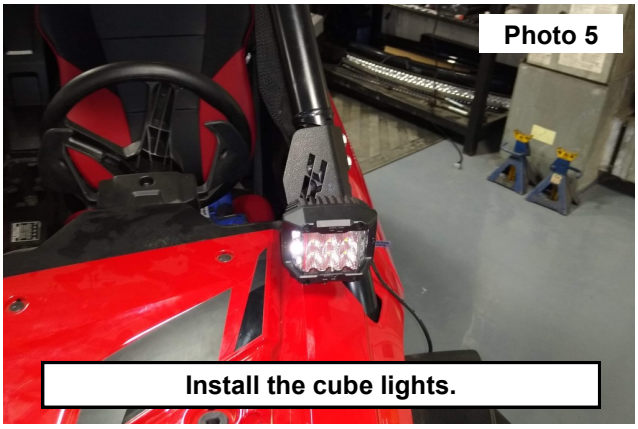


By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.