TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 92037 Installation Instructions

40-Inch Black Series LED Light Bar Kit for Honda Talon 1000, Part 92037

Part number: 92037

trailfortress.com/rough-country-led-light-kit-92037

Scan for fitment, price and install help



HONDA 2020 Talon 40” Curved Light Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
40” Dual Row LED Light Kit x1
Driver Side Light Bar Bracket x1
Pass Side Light Bar Bracket x1

TOOLS NEEDED:
5mm Allen Wrench
13mm Wrench and Socket

HARDWARE INCLUDED:
8mm-1.25 x 25mm Hex Head Bolt x2
8mm Flat Washer x2
8mm-1.25 Flange Nut x2





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS


1. Locate the Driver and Passengers side brackets. **See Photo 1.**
2. Install (1) of the supplied 8mm-1.25 x 25mm Hex Head Bolt and (1) 8mm Flat Washer into the 8mm slot in the light bar bracket. Passengers side shown. **See Photo 2.**

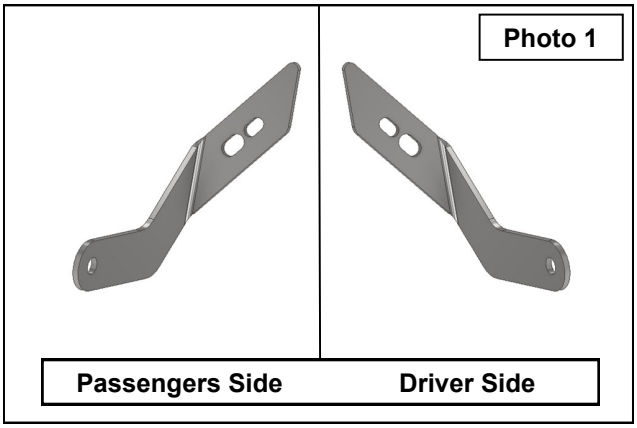

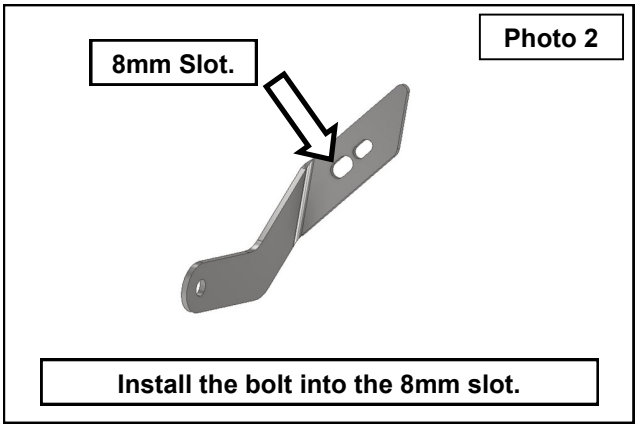


3. Install the light bracket and bolt into the roof cage gusset hole. **See Photo 3.**
4. Secure the light bracket and bolt using (1) of the supplied 8mm-1.25 Flange Lock Nuts. **See Photo 4.**



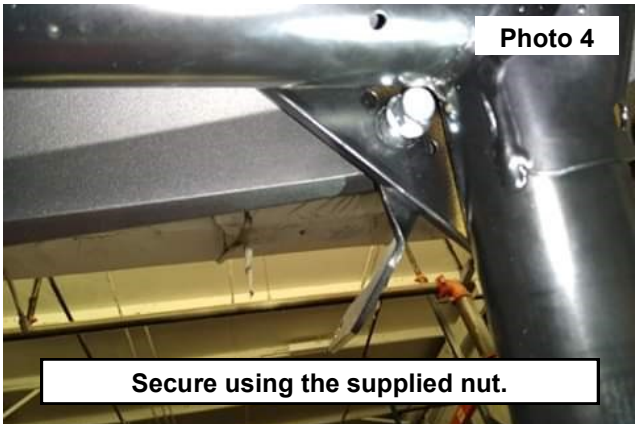

5. Snug the hardware so the brackets can still be adjusted to install the light. Use a 13mm wrench and socket. **See Photo 5**.
6. Install the Driver side light bar bracket to the cage of the UTV.
7. Install the light bar using the supplied hardware with the light bar kit. Then tighten the light bar using a 5mm allen wrench. **See Photo 6.**

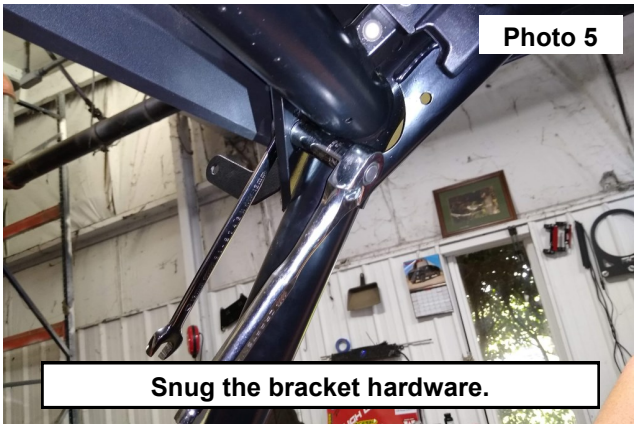



8. Tighten the Driver and Passenger light bar bracket to the cage using a 13mm wrench and socket.
9. Install the light bar wiring harness to the UTVs power supply using the corresponding instruction sheets in the light-bar kit.





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.