TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 92041 Installation Instructions

Steel Lower Door Panels for Honda Talon 1000R and 1000X

Part number: 92041

trailfortress.com/steel-lower-door-panels-honda-talon-1000r-and-1000x-rough-country-92041

Scan for fitment, price and install help




# HONDA 2019-21 TALON Door Filler

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
**Driver Side Door Filler x1**
**Pass Side Door Filler x1**
**Edge Trim x1**

**TOOLS NEEDED:**
**Philips Head Driver**
**4MM Allen Wrench**
**10mm Wrench or Socket**

**HARDWARE INCLUDED:**
**6mm x 20mm Button Head Allen x10**
**6mm Flat Head Washers x20**
**6mm Nylock Nuts x10**




**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |

## INSTALLATION INSTRUCTONS


1. Remove the (4) bolts from the door panel using a Philips head driver. **See Photos 1.** Retain hardware.
2. Remove the outer door panel from the inner structure of the UTV. **See Photo 2.**








3. Locate the dimples in the inner structure of the door. **See Photo 3.**
4. Use a 1/4” bit to drill the center of the dimples using a drill motor. Drill (5) total holes in the panel. **See Photo 4.**

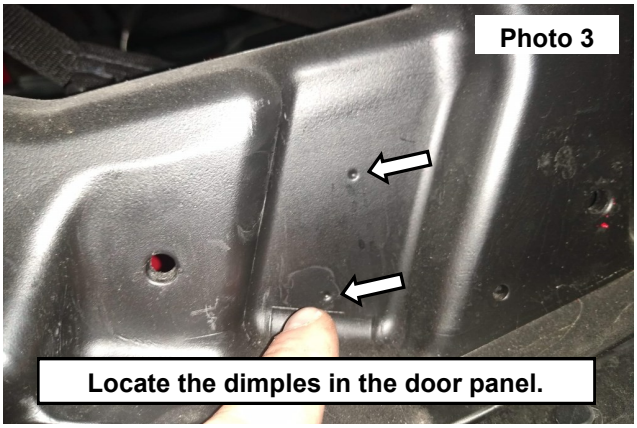






5. Apply the seal onto the bottom of the door filler. **See Photo 5.** Trim if needed.
6. Place the door filler onto the bottom of the door and secure using (5) 6mm x x20mm Button Head allen bolts (10) 6mm flat washers and (5) 6mm nylock nuts. **See Photo 6.**

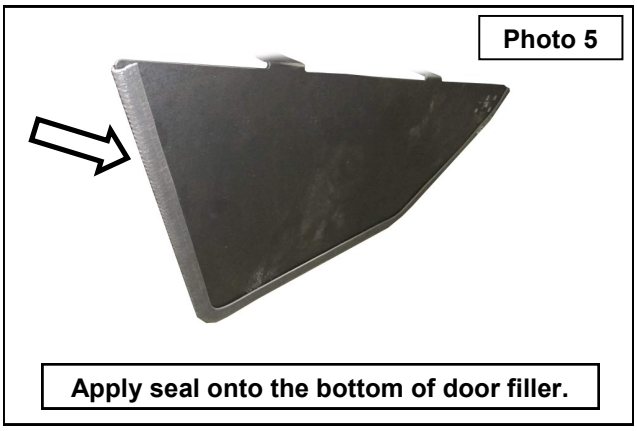




7. Tighten the door filler using a 4m allen wrench and a 10mm socket. **See Photos 7 and 8.**

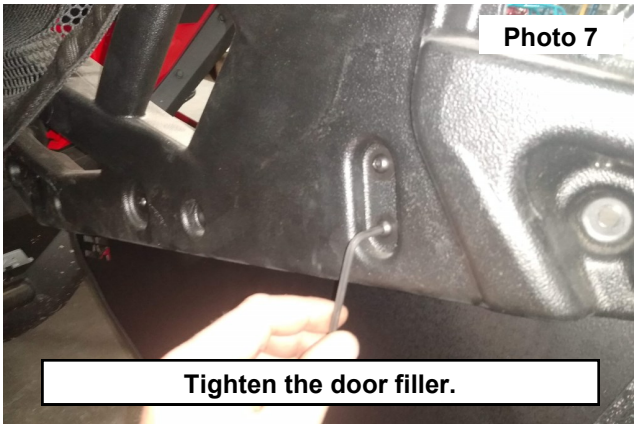





8. Install the outer door of the UTV using the OE hardware to secure the panel. **See Photo 9.**
9. Repeat this prosses on the opposite side of the UTV.








By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.