TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 92057 Installation Instructions

Tailgate Extender for Honda Pioneer 1000 and 1000-5

Part number: 92057

trailfortress.com/tailgate-extender-honda-pioneer-1000-and-1000-5-rough-country-92057

Scan for fitment, price and install help



HONDA 2016-22 Pioneer Tailgate Extender


Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Dr Tailgate Extender Bracket x1
Pass Tailgate Extender Bracket x1
Dr Clamp x1
Pass Clamp x1
Bottom Panel x1
Rear Panel x1
Dr Side Panel x1
Pass Side Panel x1
Cable Plate x2

TOOLS NEEDED:
Screwdriver
5mm Allen Wrench
10mm Socket/Wrench
13mm Socket/Wrench

HARDWARE INCLUDED:
8mm x 25mm Button Head Bolts x14
8mm Flange Lock Nuts x4
8mm Lock Nuts x10
8mm Nylon Washers x12
6mm x 35mm Hex Head Bolts x2
6mm x 20mm Button Head Bolts x2
6mm Flat Washer x4
6mm Nylock Nuts x2
3/8” Spacers x6
1/2” Spacers x4

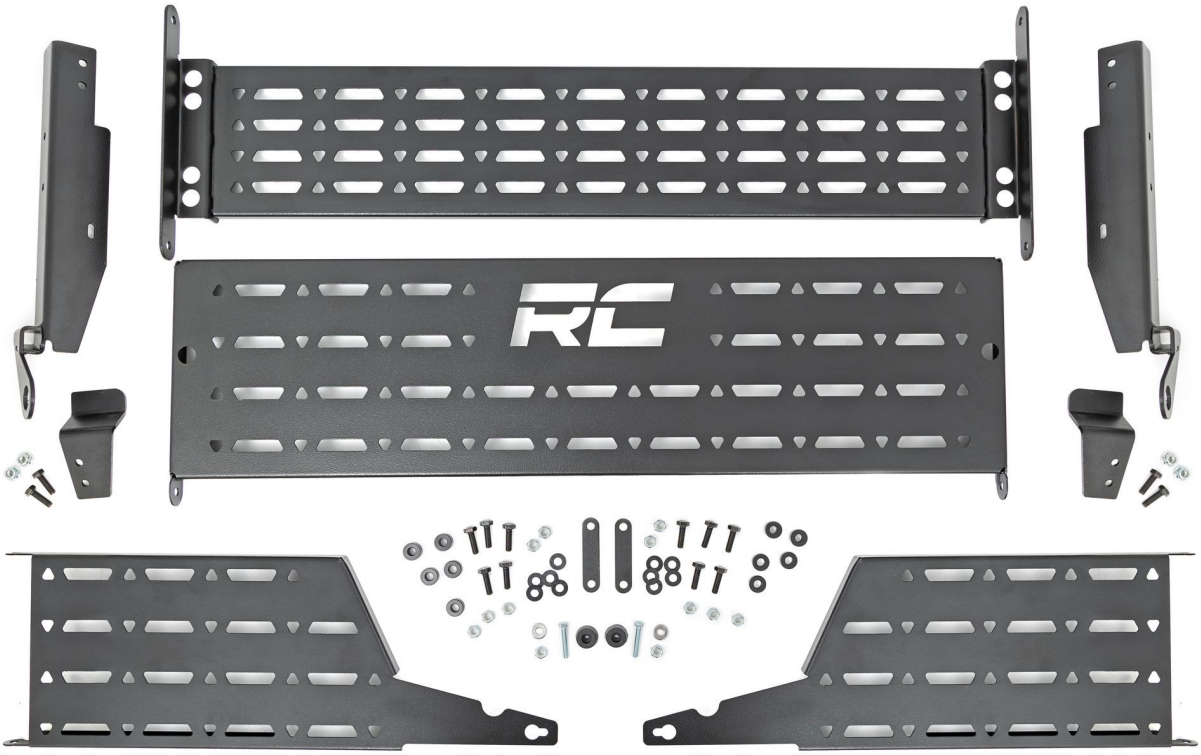



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTIONS

1. Remove the tailgate cable using a 5mm Allen wrench. **See Photo 1**.
2. Remove the 3 Phillip's head bolts in the side of the bed using a screw driver and remove the push pin using a trim remover tool. **See Photo 2**.

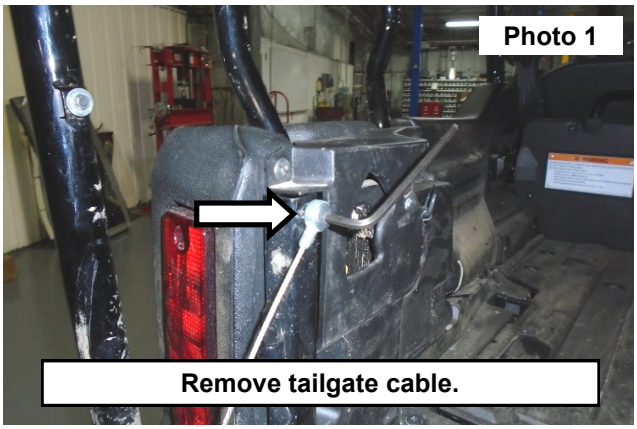

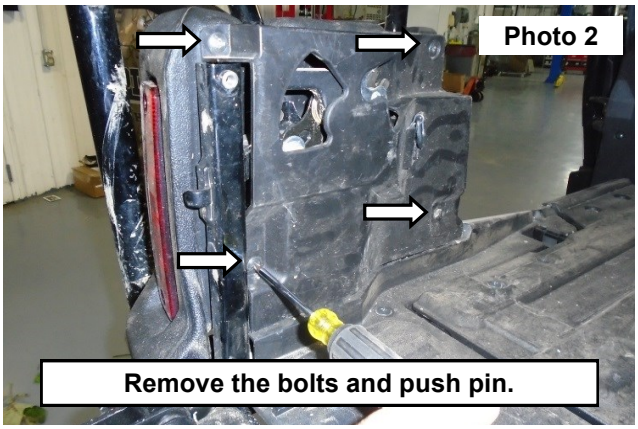



3. Remove the D-ring from the side of the bed using a 10mm socket/wrench. **See Photo 3**.
4. Remove the plastic panel from the side of the bed. **See Photo 4**.

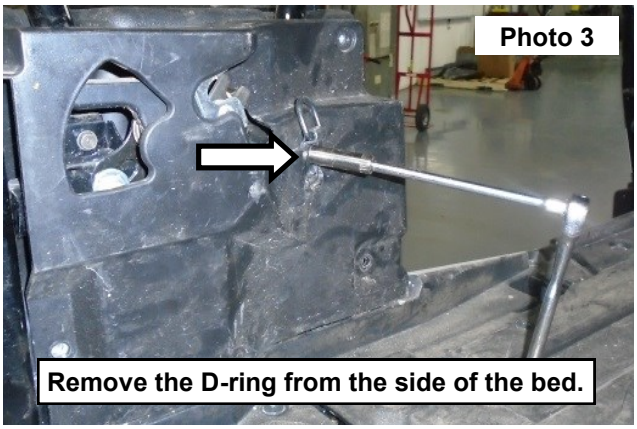





5. Remove the lower bolt from the side bracket using a 10mm socket/wrench. **See Photo 5**.
6. Pull the brake light paneling back to get access to the tail gate hinge. **See Photo 6**.

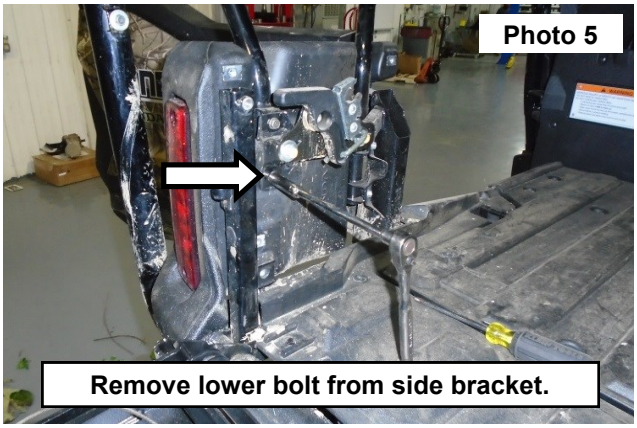

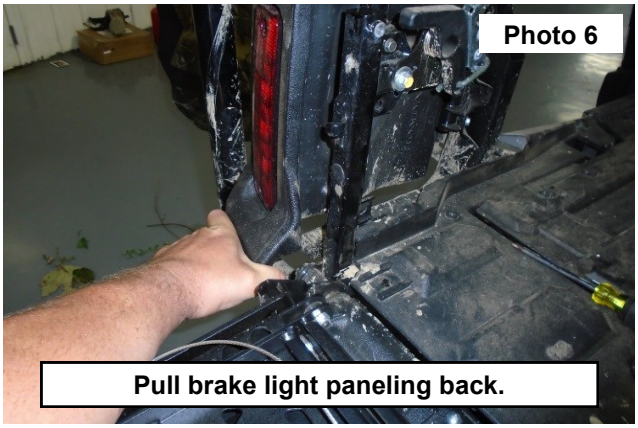


7. Remove the hinge bolt using a 10mm socket/wrench. **See Photo 7**.
8. Pull the pin out to release the tailgate. **See Photo 8**.

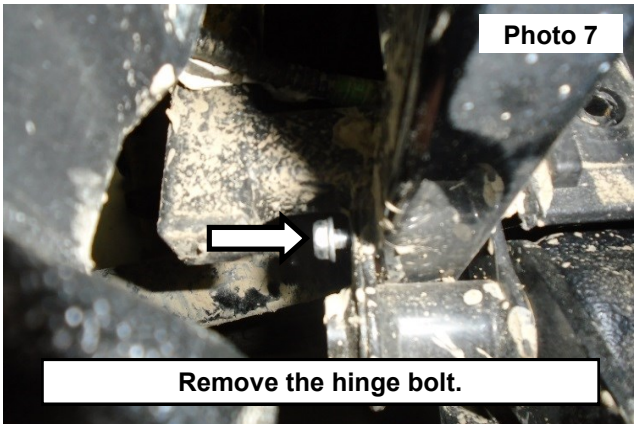

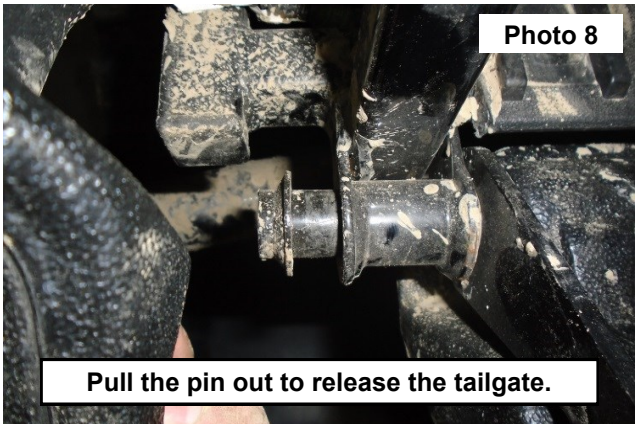



9. Pull the tailgate away from the bed and in the opposite direction from the other hinge. **See Photo 9**.
10. Place the tailgate extender bracket on the Pass/Dr sides of the tailgate. **See Photo 10**.



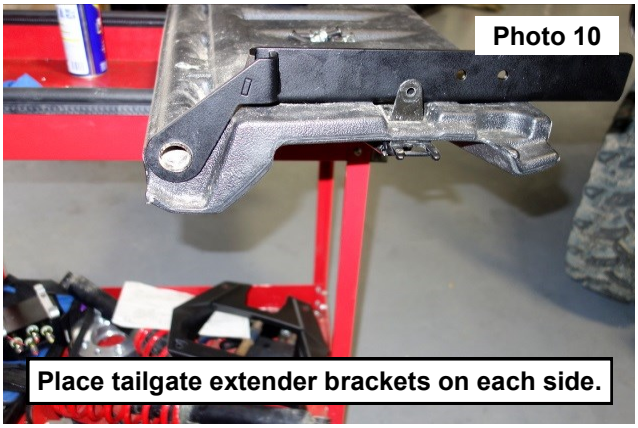



11. Install the supplied extender bracket 3/8” spacer between the bracket and the tailgate with the supplied 6mm x 35mm hex bolt and washer using a 10mm socket/wrench. **See Photo 11** and **Photo 12**.

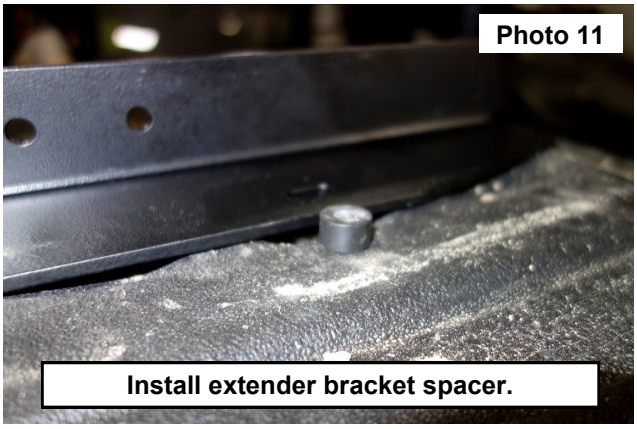

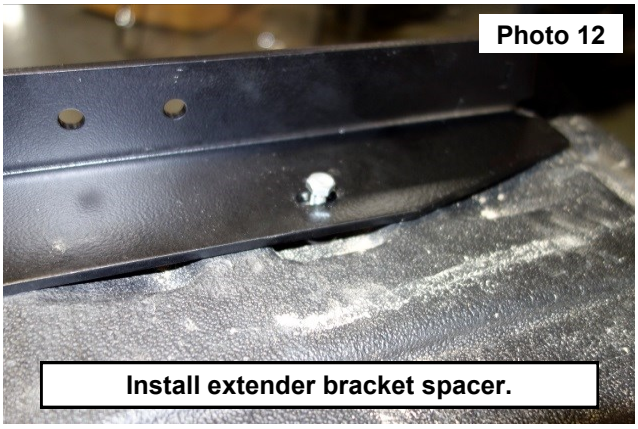


12. Install the clamps to the extender bracket on the Pass/Dr sides with the supplied 8mm x 25mm button head bolts and lock nuts using a 5mm Allen wrench and 13mm socket/wrench. **See Photo 13**.
13. Install the bottom panel to the extender brackets in the rear most hole with the supplied 8mm x 25mm bolts, 3/8" spacers, and lock nuts. **See Photo 14**.

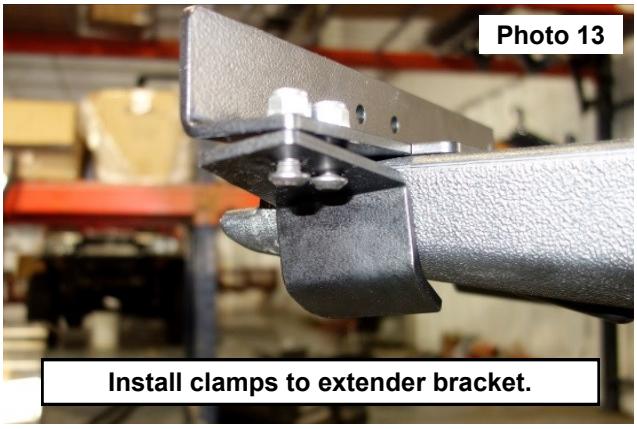

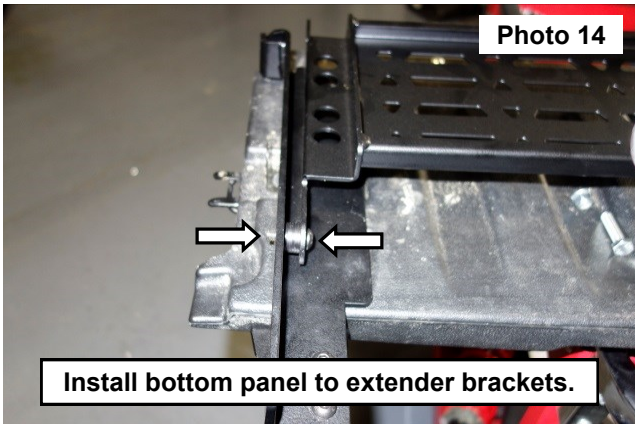



14. Install the tailgate back on the vehicle by sliding one side on first and then pulling the pin back to get the other side on. **See Photo 15** and **Photo 16**.
15. Press the pin back into place and reinstall the hinge bolt.



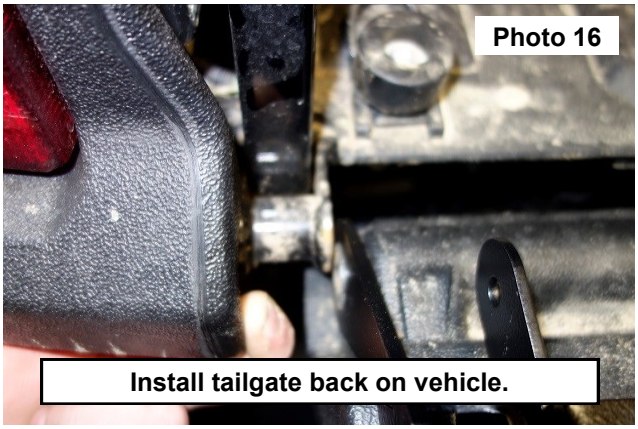



16. Install the rear panel to the bottom panel with the supplied 8mm x 25mm bolts, 3/8" spacers, and lock nuts using a 5mm Allen wrench and 13mm socket/wrench. **See Photo 17** and **Photo 18**.

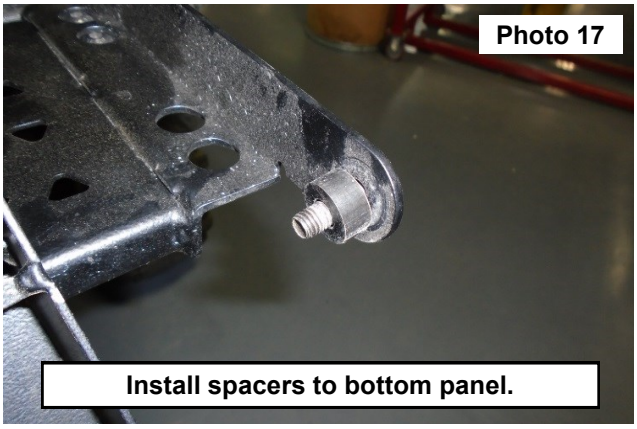

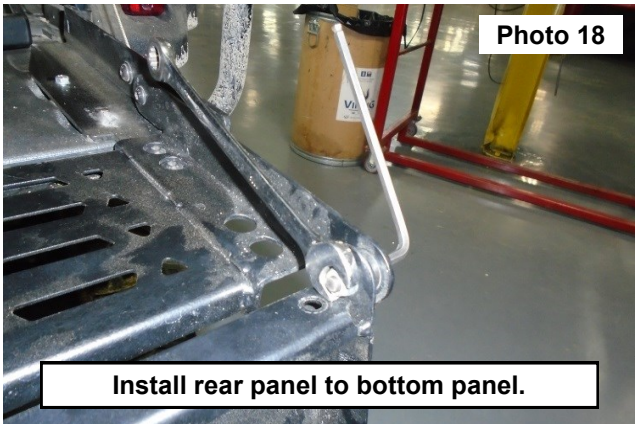



17. Let the rear panel hang down and install the side panels to the rear panel with the supplied 8mm x 25mm button head bolts, 1/2” spacers, and lock nuts. **See Photo 19** and **Photo 20**.

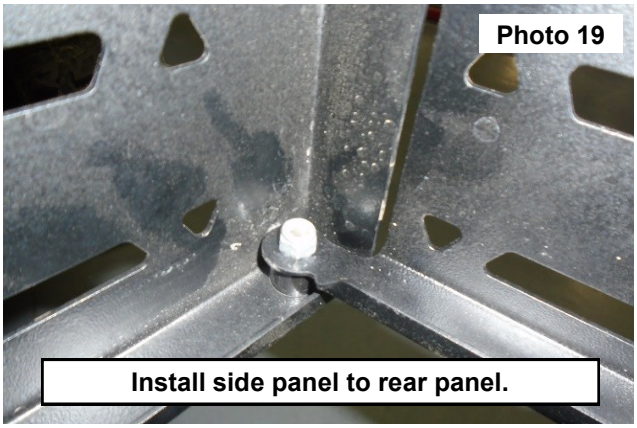

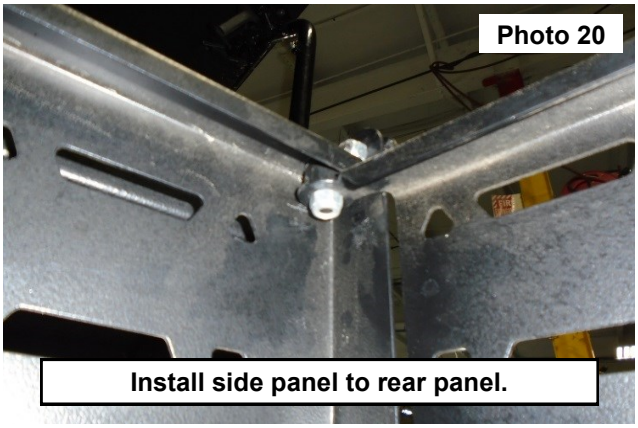



18. Install the tailgate cable plate using the stock hardware. **See Photo 21**.
19. Install the cables to the plates using the supplied 8mm x 25mm bolts, nuts, and nylon washers. **See Photo 22**. **NOTE: Install a nylon washer between the nut and plate, plate and cable, and cable and bolt**.

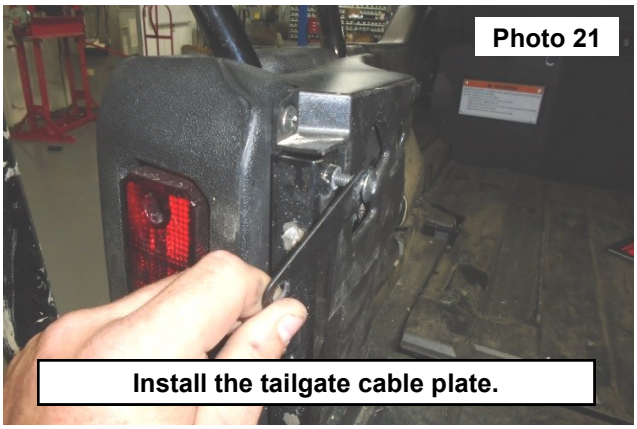

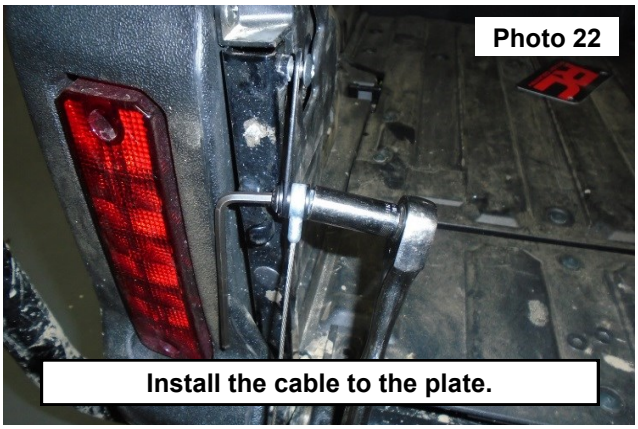


20. Install the other end of the cable to the tailgate extender bracket using the supplied 8mm x 25mm bolts, nuts, and nylon washers. **See Photo 23** and **Photo 24**.

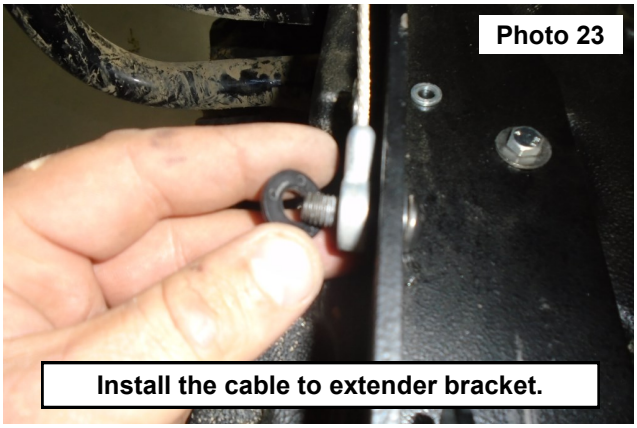

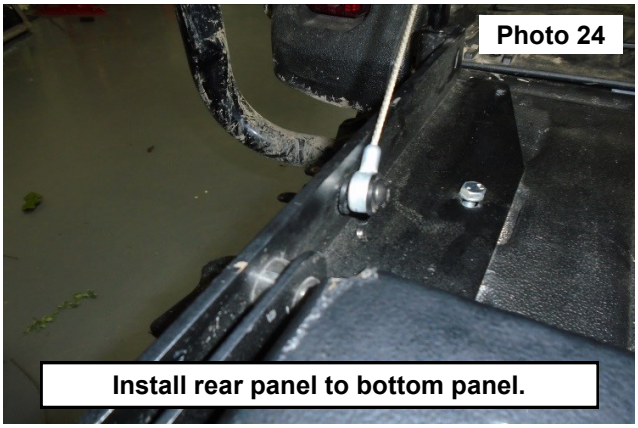


21. Fold the rear panel with the side panels up, and hook side panels to the bolt securing the cable plate. **See Photo 25**.
22. Install the supplied bump stops to the outside of the side panels using the supplied 6mm x 20mm bolts, nuts, and washers. **See Photo 26** and **Photo 27**.

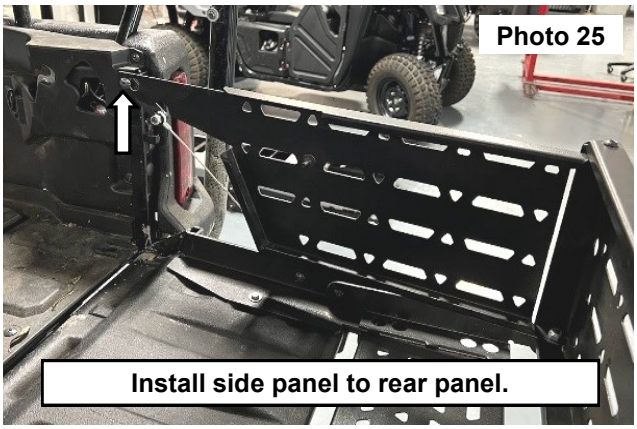



23. **NOTE: When folding the rear panels, be sure to fold them both at the same time so the sides interlock. The panels will not sit flush otherwise**. **See Photo 28**.



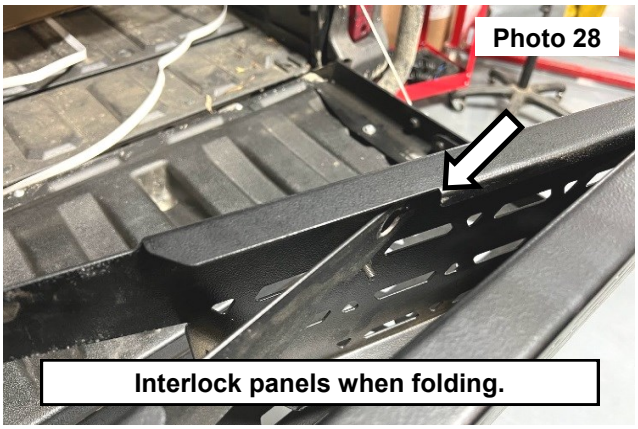



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.