TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 92058 Installation Instructions

Cup Holder with MLC-8 Switch Panel for Honda Pioneer 1000 (2016-2025)

Part number: 92058

trailfortress.com/rough-country-cup-holder-92058

Scan for fitment, price and install help



HONDA 2021 Pioneer Dash Cupholder / MLC-8 Mount


Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Cupholders x2
Bracket x1
Cover Plate x1

TOOLS NEEDED:
3/16” Drill Bit
Drill Motor
Rivet Tool
Phillips Bit Driver

HARDWARE INCLUDED:
Rivets x5
Screws x4

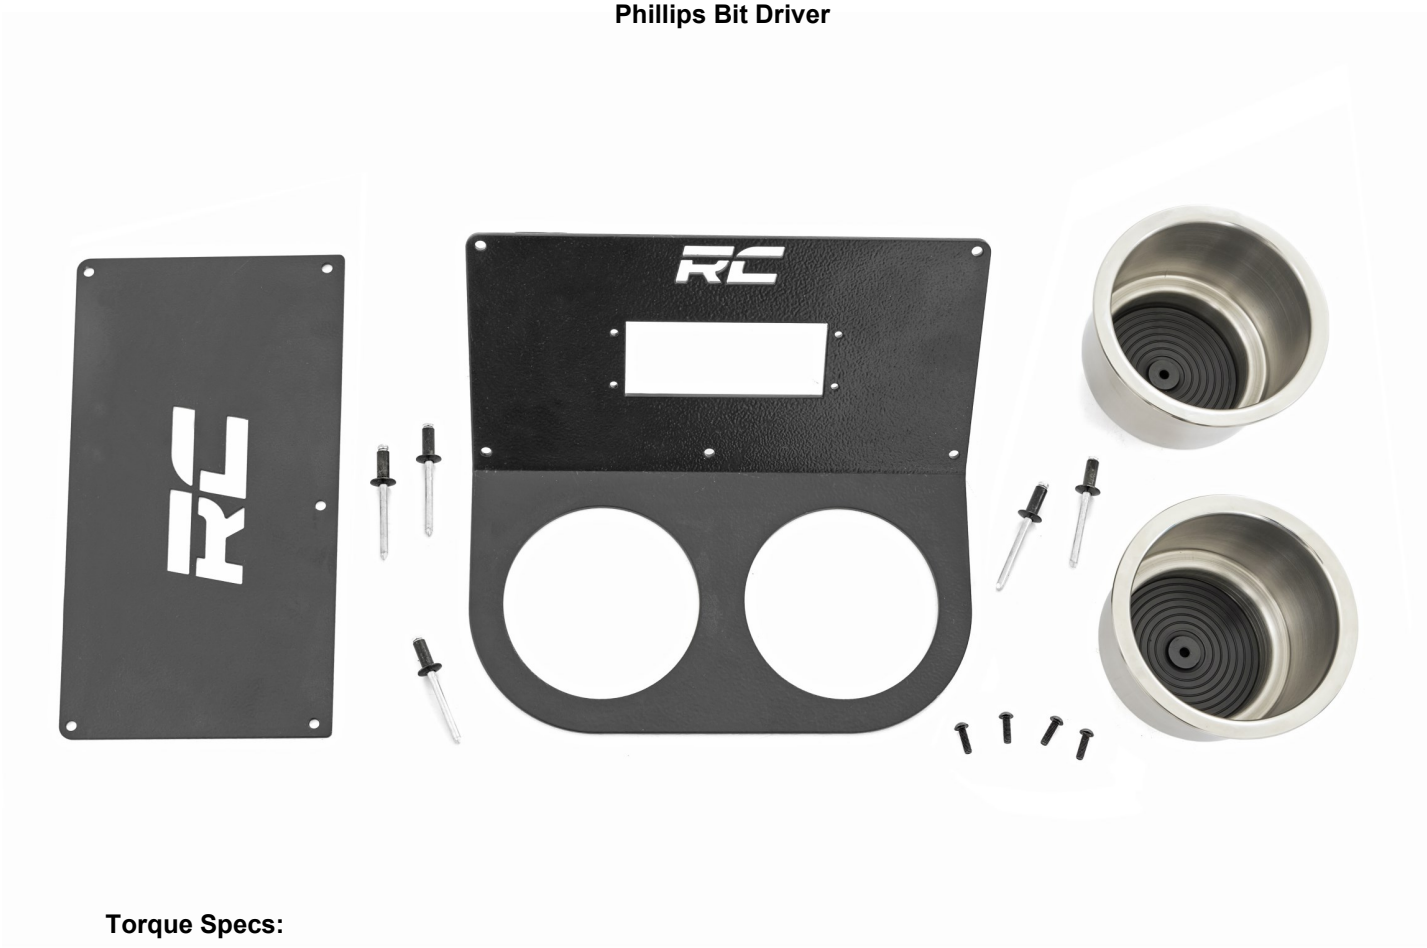

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Use a 3/16” drill bit to remove the (5) rivets from OE dash plaque. **See Photo 1.**
2. Remove the dash plaque from the vehicle. **See Photo 2.**






3. If installing the RC cover plate skip to step 9. Cut a hole into the dash for the MLC-8 control wiring harness using a 1” hole saw. **See Photo 3.**
4. Clean any shavings from the rivets and trimming the hole in the dash insert.
5. Install the (2) cup holders into the mounting bracket. **See Photo 4.**






6. Place the MLC-8 wiring through the mounting bracket. **See Photo 5.**
7. Secure the MLC-8 to the bracket using (4) of the supplied screws. Tighten using a Philips bit driver. **See Photo 6.**



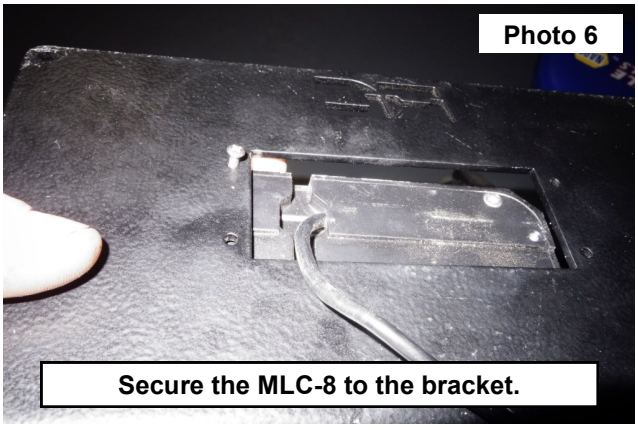

8. Connect all accessory's to the MLC-8 fused block and to the power source on the UTV. **See Photo 7.**
9. Install the bracket to the dash (and the RC cover plate if being installed) of the UTV and secure using (5) of the supplied rivets. **See Photo 8.**



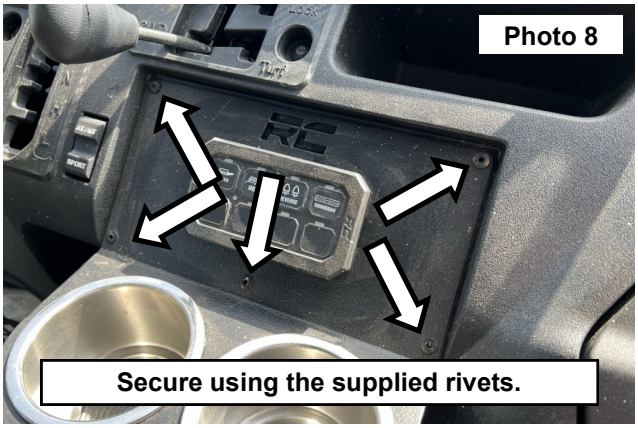

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.