TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 92059 Installation Instructions

Front Cargo Rack with 6-Inch LED Light Bar for Honda Pioneer 1000

Part number: 92059

trailfortress.com/rough-country-front-cargo-rack-92059

Scan for fitment, price and install help



HONDA 1000/1000-5 Front Rack

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Dr Side Bracket x1
Pass Side Bracket x1
Front Bracket x1

TOOLS NEEDED:
4mm Allen Wrench
5mm Allen Wrench
13mm Socket/Wrench
17mm Socket/Wrench
18mm Socket/Wrench

HARDWARE INCLUDED:
12mm x 45mm Hex Bolts x4
12mm Flat Washers x4
12mm Lock Nuts x4
12mm Spacers x4
8mm x 25mm Button Head Bolts x6
8mm Flat Washers x12
8mm Lock Nuts x6
8mm Nylon Washers x2
6mm x 20mm Button Head Bolts x2
6mm Flat Washers x2
6mm Nutserts x2





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTIONS


1. Remove the bolts in the front pillar on the cage using a 17mm socket. **See Photo 1**.
2. Install the supplied 12mm x 45mm bolts, washers, and spacers in the supplied bracket. **See Photo 2**.

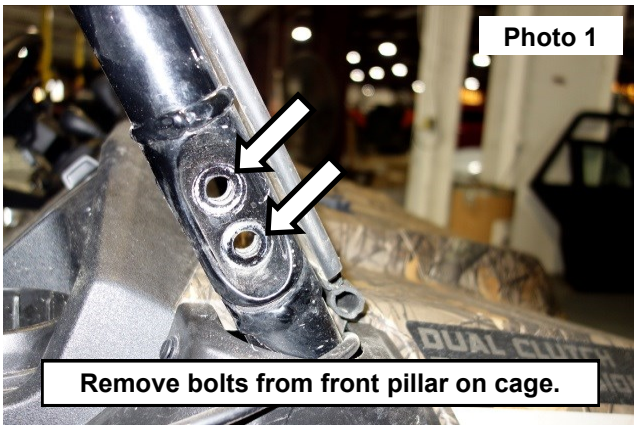

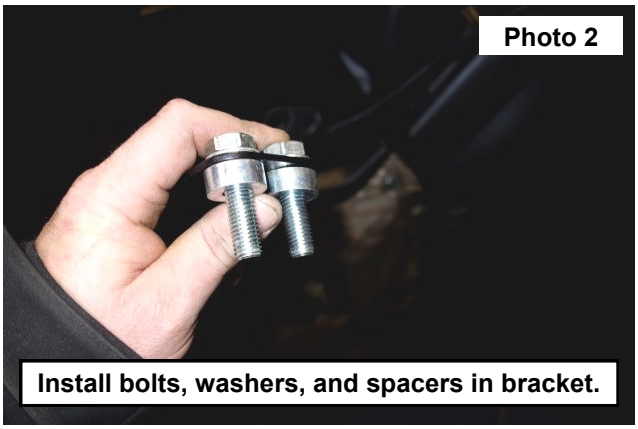

3. Install the brackets to the UTV on the Dr/Pass sides using the supplied 12mm nuts on the inside of the pillar. Secure using two 18mm socket/wrenches. **See Photo 3**.
4. Install the front rack to the brackets with the supplied 8mm x 25mm button head bolts, flat washers, nylon washers and lock nuts using a 5mm Allen wrench and 13mm socket/wrench. **See Photo 4, Photo5,** and **Photo 6**.




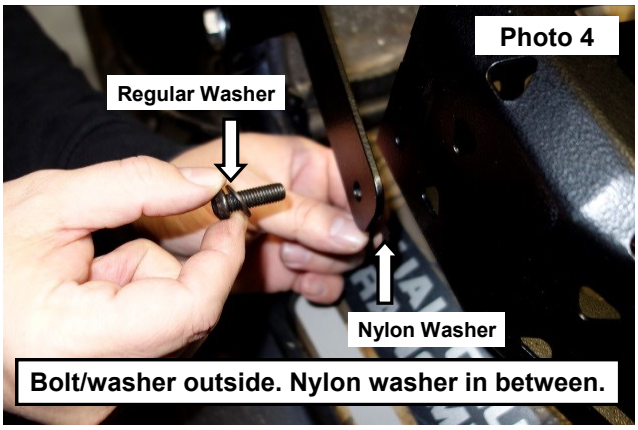








5. Place the front support bracket on the bumper bar and lower the front rack down and install the supplied 8mm bolts, nuts, and washers. **See Photo 7** and **Photo 8**.

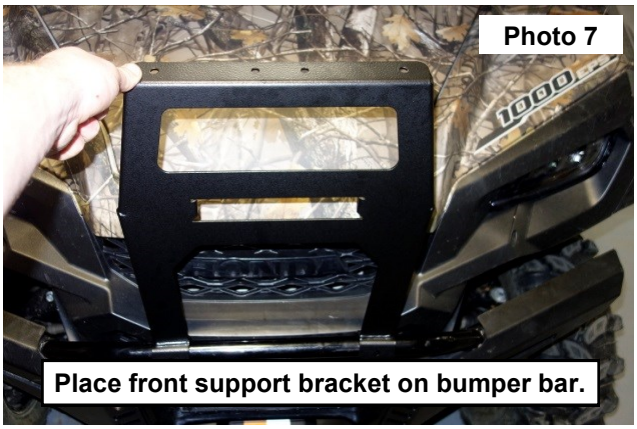

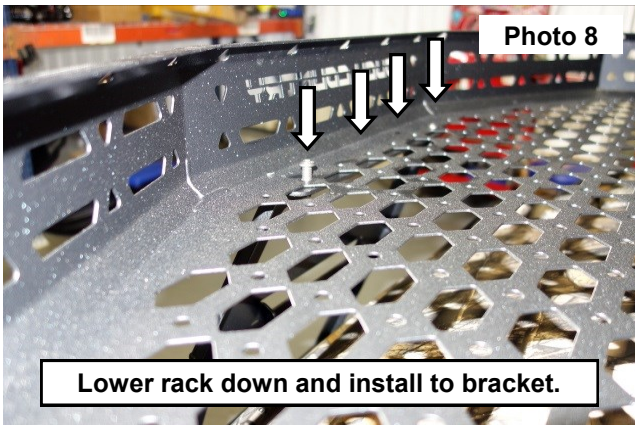



6. Mark through the hole where the front bracket rests on the bumper bar. **See Photo 9**.
7. Raise the rack up and drill the marked hole using a 25/64” drill bit. **See Photo 10**.

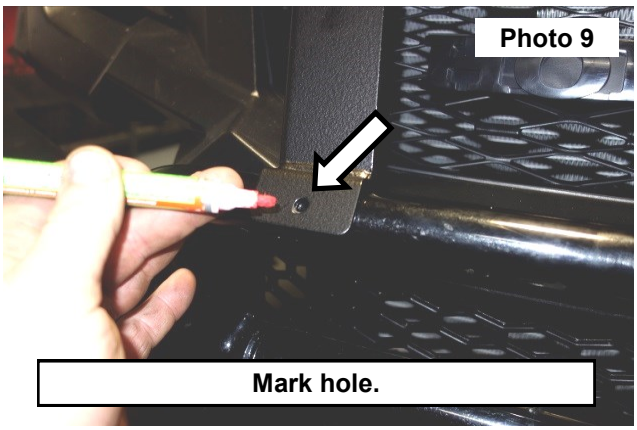

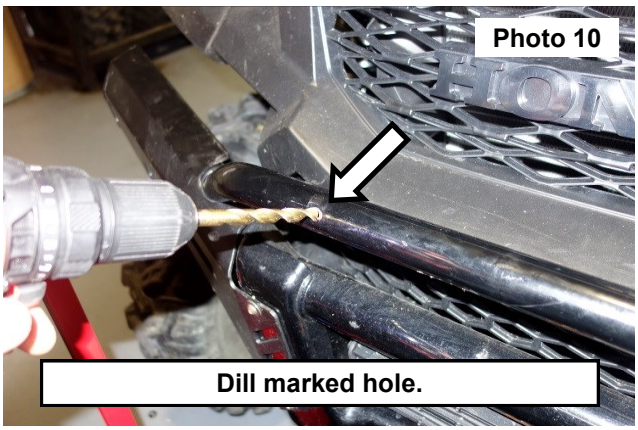


8. Install the supplied 6mm nutserts using a nutsert tool. **See Photo 11**.
9. Install the front bracket to the bumper bar with the supplied 6mm button head bolts and flat washers using a 4mm Allen wrench. **See Photo 12**.

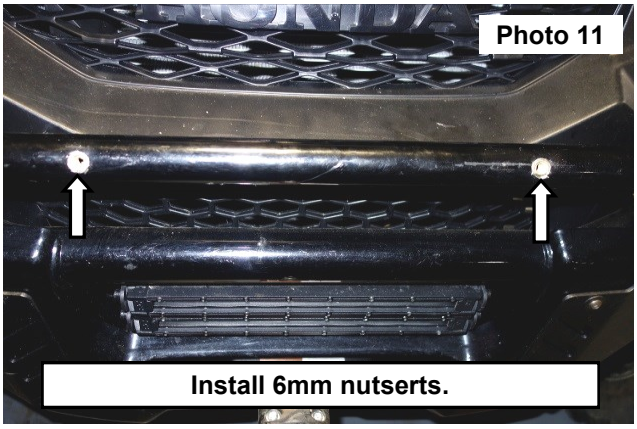

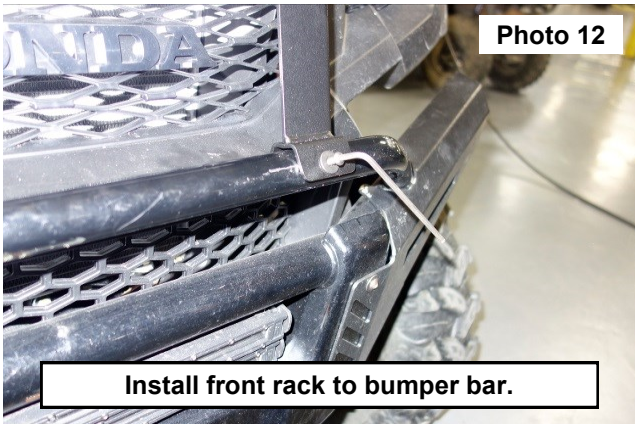

10. Install the LED light bar using the hardware supplied with the light.
11. Running the wiring along the desired route to the power source.

NOTICE **Make sure to keep wire away from hot and moving parts**.

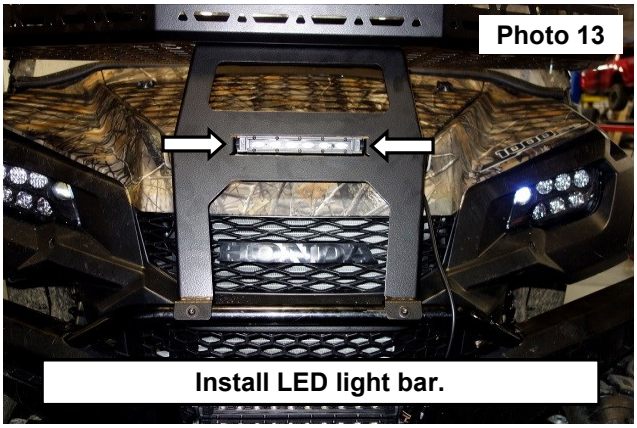



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.