TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 93035 Installation Instructions

50-Inch LED Light Bar Kit for Polaris General (2016–2025)

Part number: 93035

trailfortress.com/rough-country-led-light-kit-93035

Scan for fitment, price and install help




# POLARIS 2019 General 50” Lower Window Mount

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
**50” Single Row LED Light Kit x1**
**Driver Side Bracket x1**
**Pass Side Bracket x1**

**TOOLS NEEDED:**
**15mm Wrench or Socket**





**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |


## INSTALLATION INSTRUCTONS


1. Remove the lower cage bolts using a 15mm socket. Retain hardware for reuse. **See Photo 1.**
2. Locate the driver and passengers side light mounts. ***NOTE:*** *The Pass Side has a notch for identification.* **See Photo 2.**

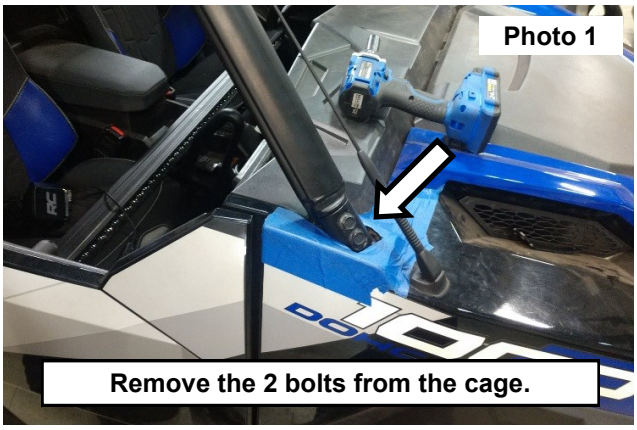

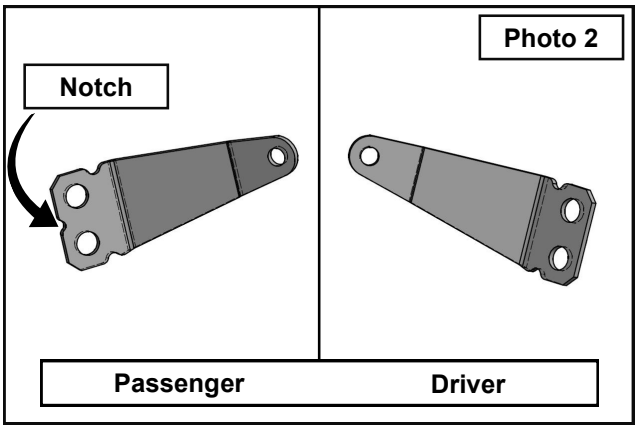


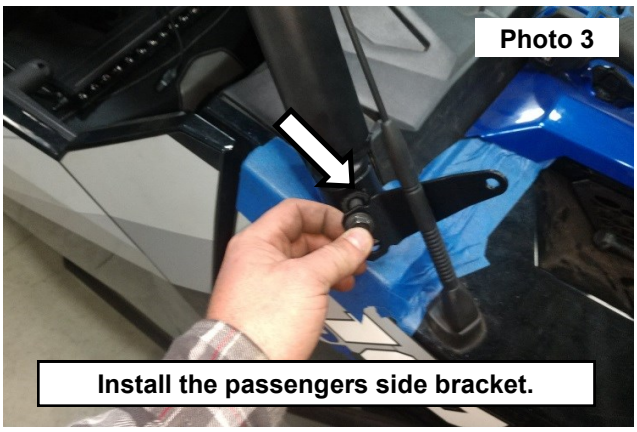

3. Passengers side shown. Install the light mount using the retained hardware. Tighten using a 15mm socket. **See Photo 3.**
4. Remove the bolts on the driver side and Install the light bracket. Tighten using a 15mm socket. **See Photo 4.**
5. Install the wiring harness onto the UTV using the corresponding instruction sheets supplied in the light kit.

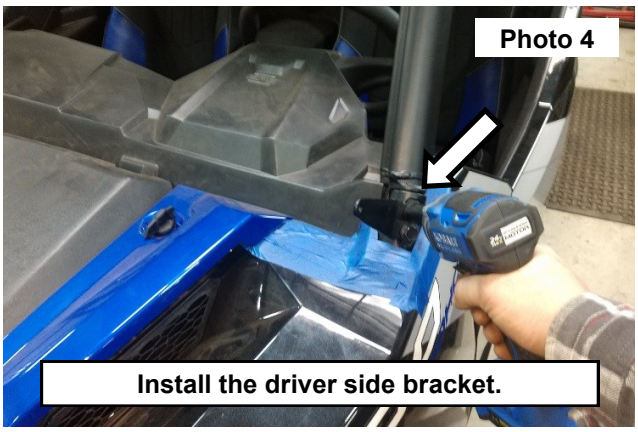


6. Install the 50” light bar into the light brackets on each side. Secure using the supplied hardware in the light kit. **See Photo 5.**
7. Connect the light bar to the wiring harness, set the light to the desired angle and tighten using the supplied allen wrench . **See Photo 6.**

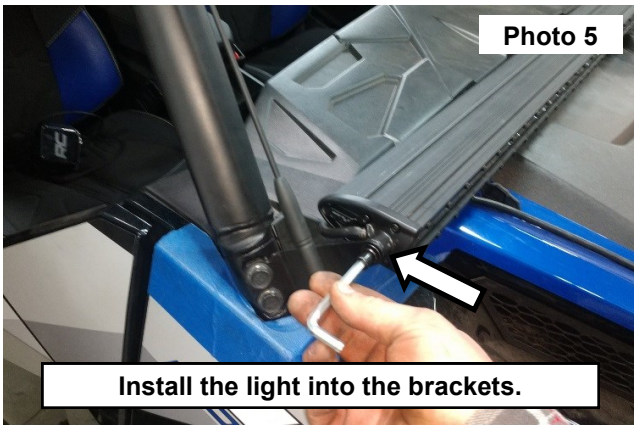





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.