TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 93039 Installation Instructions

2-Inch Receiver Hitch for Polaris RZR XP 1000 (2014-2023)

Part number: 93039

trailfortress.com/2-inch-receiver-hitch-polaris-rzr-xp-1000-rough-country-93039

Scan for fitment, price and install help



POLARIS 2014-20 RZR 1000 Receiver Hitch

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Receiver Hitch x1

TOOLS NEEDED:
15mm Wrench and Socket





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS


1. Use a jack to lift the rear of the UTV up enough to take the load off of the suspension, install jack stands.
2. Clean the area around the inside of the rear control arm bolts.
3. Using a 15mm wrench and socket, remove the (2) upper and (2) lower control arm bolts. **See Photos 1 and 2**. Retain hardware for reuse.

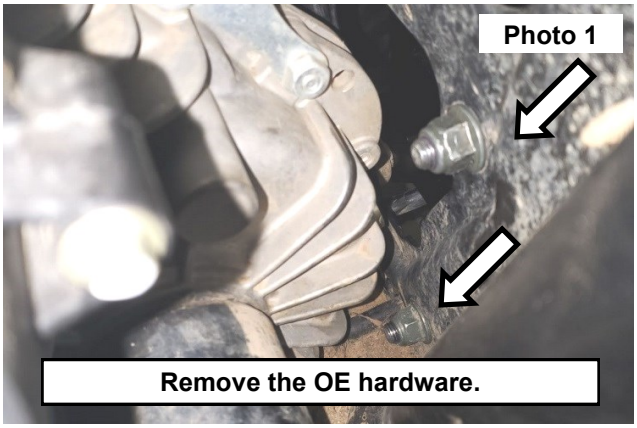

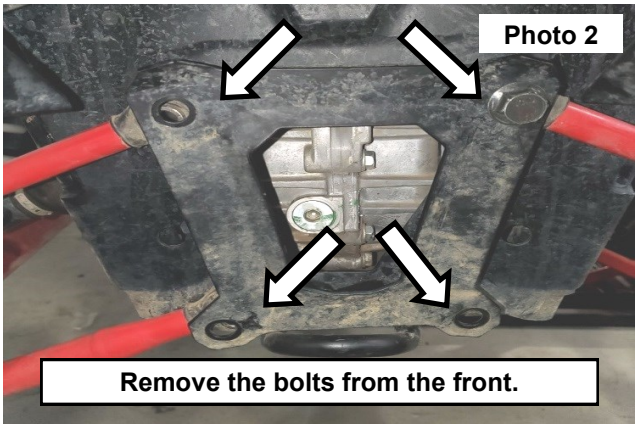



4. Remove the outer control arm plate. **See Photo 3.**

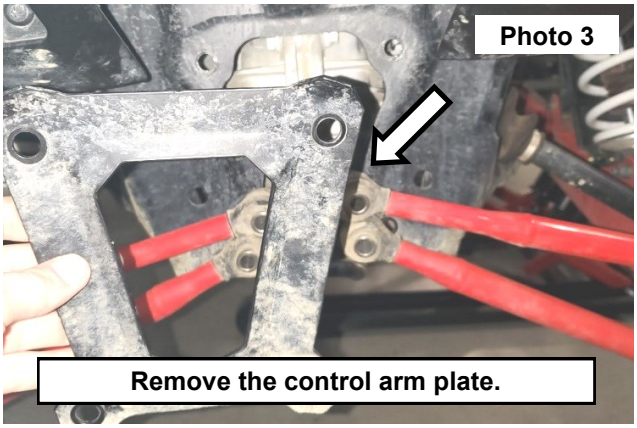

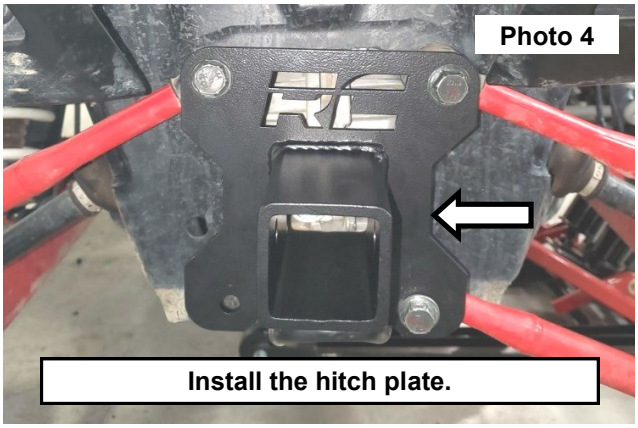

5. Install the hitch plate onto the UTV using the (4) OE bolts and nuts. **See Photo 4.**
6. Lift the rear or the UTV up using a jack and remove the jack stands, lowering the vehicle onto the ground.
7. Tighten the OE hardware using a 15mm wrench and socket. **See Photo 5.**

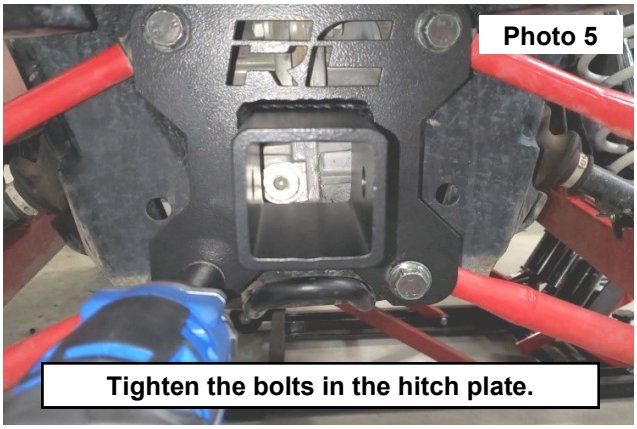

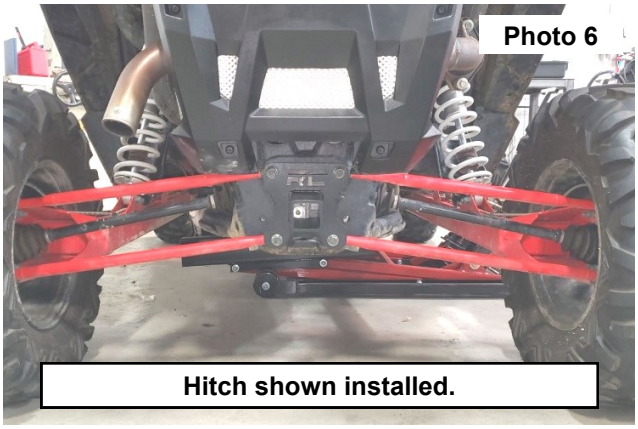

8. Hitch shown installed. **See Photo 6.**