TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 93063 Installation Instructions

Winch Mount for Polaris RZR PRO XP and PRO XP 4

Part number: 93063

trailfortress.com/winch-mount-polaris-rzr-pro-xp-and-pro-xp-4-rough-country-93063

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®


921930630

POLARIS 2020 RZR Pro Winch Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Content:	**Tools Needed:**	**Hardware Included:**
Winch Mount/Cradle x1	T40 Torx Bit	10MM-1.5x35MM Bolt x4
Winch Front Cap x1	13mm Socket/Wrench	10MM Flat Washer x6
Shim x2	16mm Socket/Wrench	10MM-1.5 Nylock Nut x2

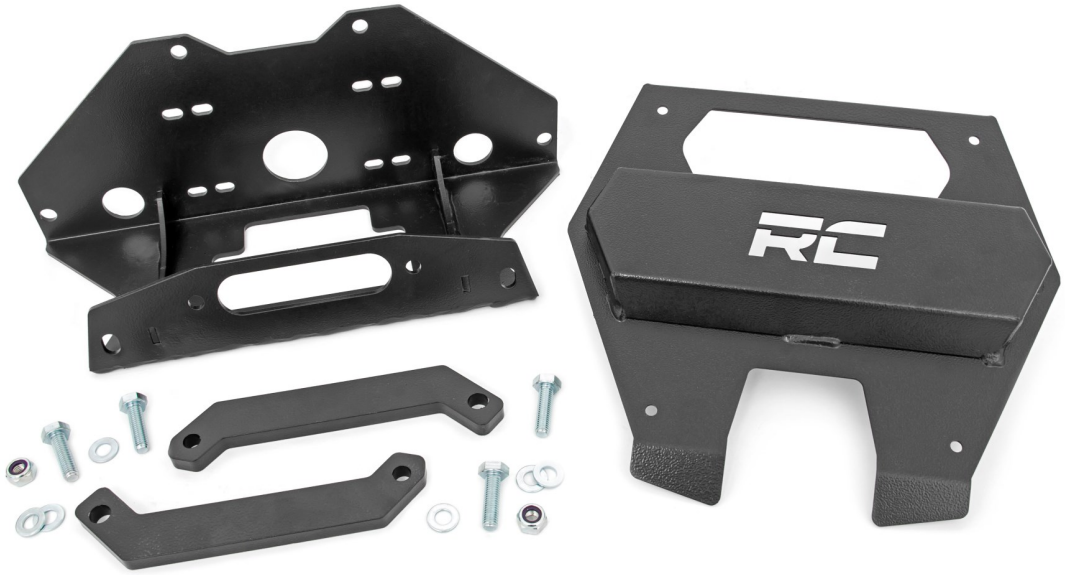


Torque Specs:


Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

RC ROUGH COUNTRY


INSTALLATION INSTRUCTONS


1. Jack up the front of the vehicle.
2. Remove the center trim panel by removing the four screws using a T40 Torx bit. **See Photo 1**.
3. Remove the bumper by removing the two screws on each side using a T40 Torx bit. **See Photo 2**.

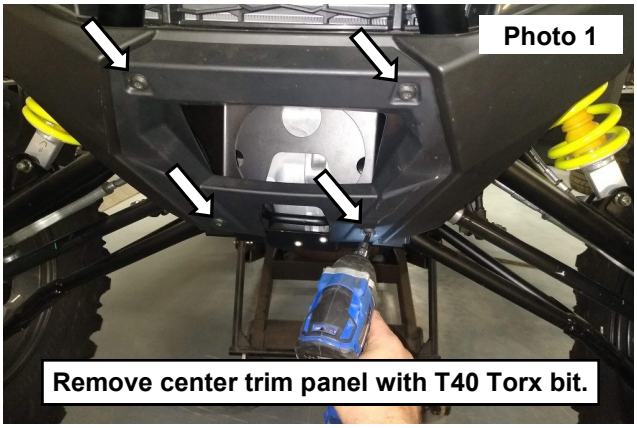

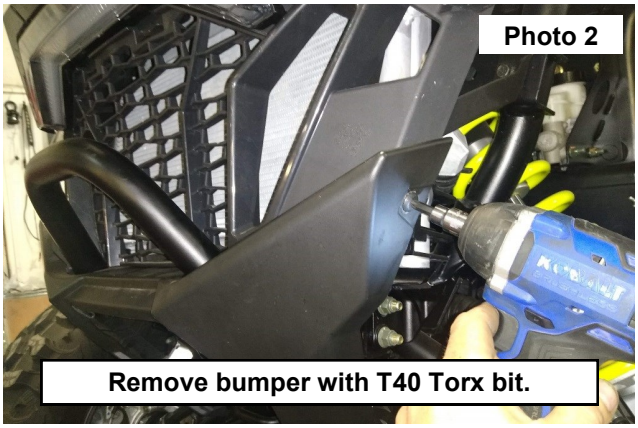



4. Remove the stock bolts in the center mount and bullbar using a 13mm socket/wrench. **See Photo 3**.
5. Remove the bullbar bolts behind the bumper and remove the bumper pushpins. **See Photo 4**.

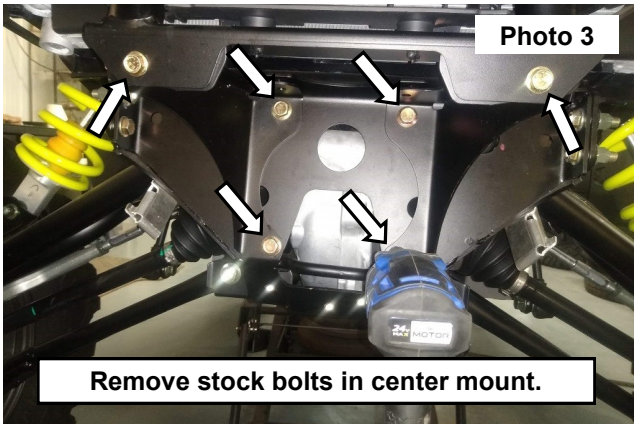

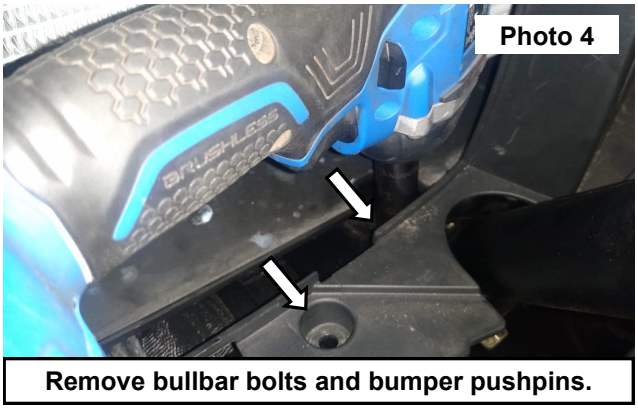



6. Install the hawse fairlead in the winch mount using the supplied bolts. **See Photo 5**.
7. Set the winch in the winch mount in the orientation shown below. **See Photo 6**.

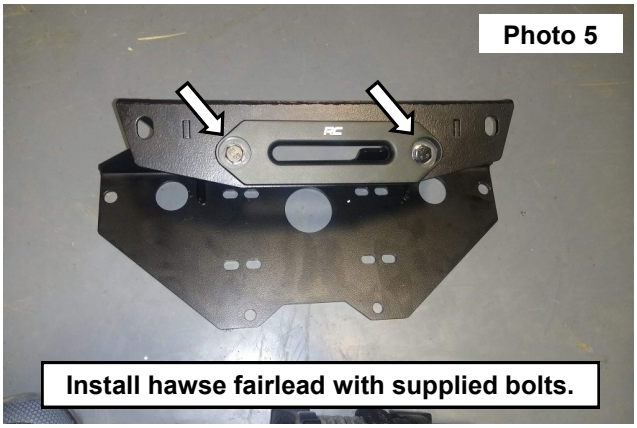

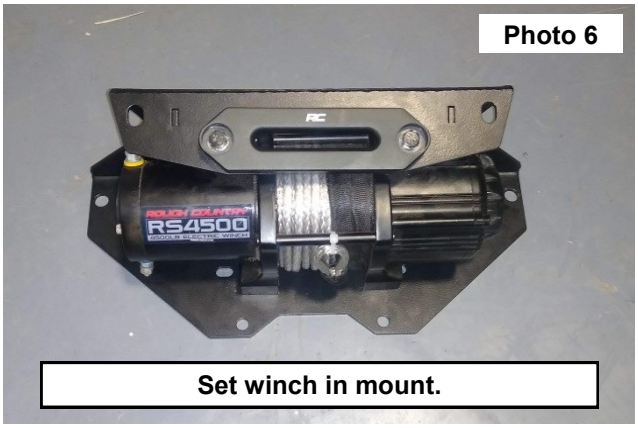


8. Install the bolts in the bottom of the winch using the supplied bolts, nuts, and washers. **See Photo 7**.
9. Install the winch mount with the shims behind the mount using the supplied 10MM-1.5x35MM bolts, nuts, and washers. Tighten with a 16mm socket/wrench. **See Photo 8**.

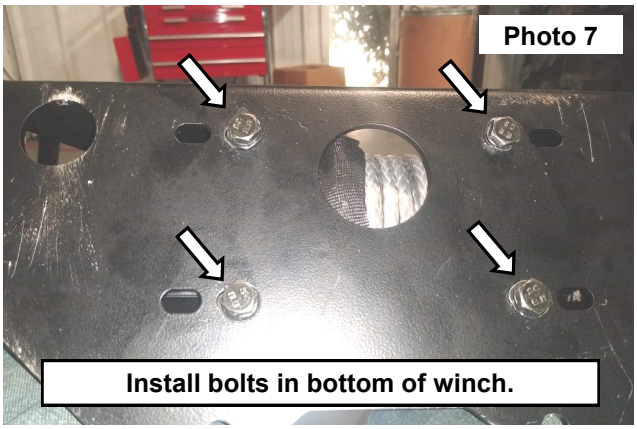

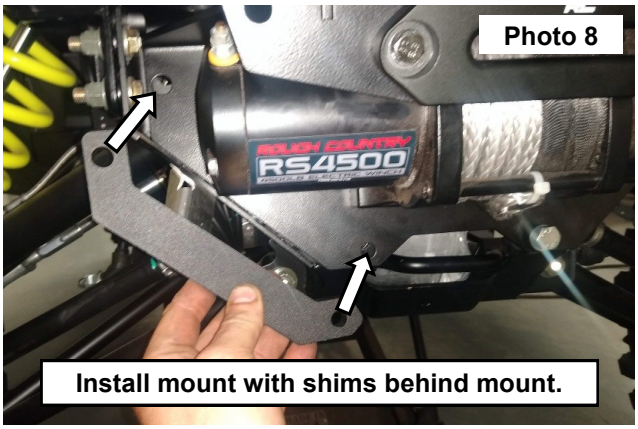

10. Reinstall the bullbar using the stock hardware. **See Photo 9**.
11. Reinstall the bumper and install the Winch Front Cap using stock hardware. **See Photo 10**.

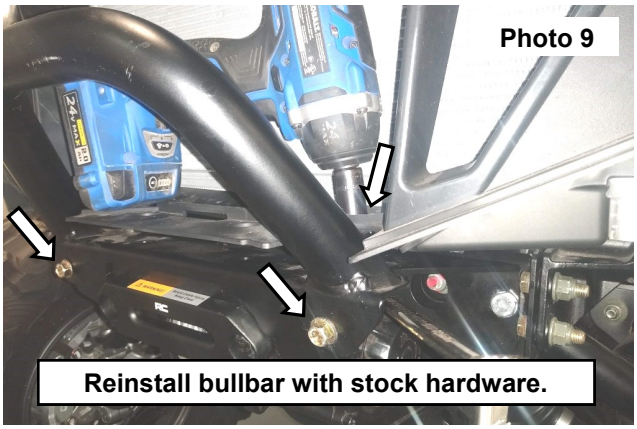







By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.