TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 93095 Installation Instructions

2.5-Inch Lift Kit for Polaris RZR XP 1000 (2014–2023)

Part number: 93095

trailfortress.com/rough-country-2-5-inch-lift-kit-93095

Scan for fitment, price and install help



POLARIS 2014-20 RZR XP 1000 Crew 2.5” Lift Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Preload Spacers x4

TOOLS NEEDED:
15mm Socket/Wrench
18mm Socket/Wrench
Spring Compressor



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

trailfortress.com/rough-country-2-5-inch-lift-kit-93095

INSTALLATION INSTRUCTONS

1. Jack up the vehicle and place on jack stands. Let the suspension droop full length.
2. Remove wheels.
3. Remove the lower strut bolt using a 15 mm (front struts) or 18mm (rear struts) socket/wrench. **See Photo 1**.
4. Mark the position of the spanner nut and then back it out completely. **See Photo 2**.

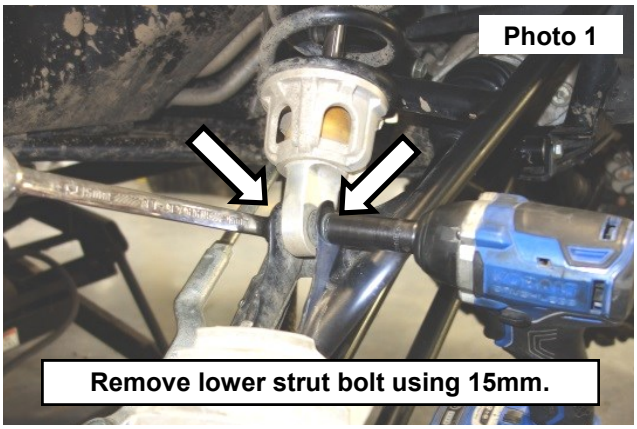

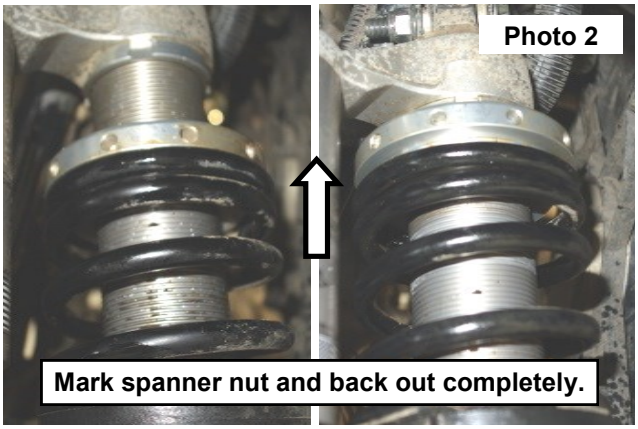

5. Use a spring compressor on the lower spring and remove the spring and spring keeper. **See Photo 3**.
6. Install the spacer with the lip down toward the lower spring and reinstall the spring and spring keeper. **See Photo 4**.

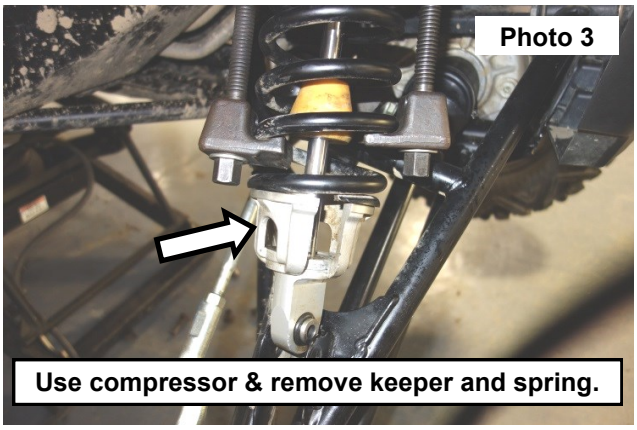

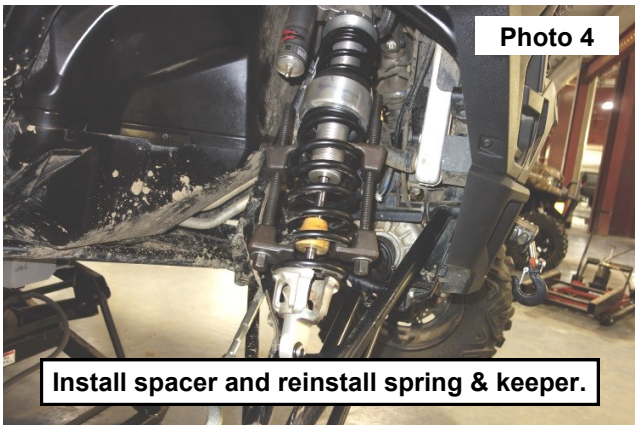

7. Remove spring compressor and tighten the spanner nut to the marked location. **See Photo 5**.

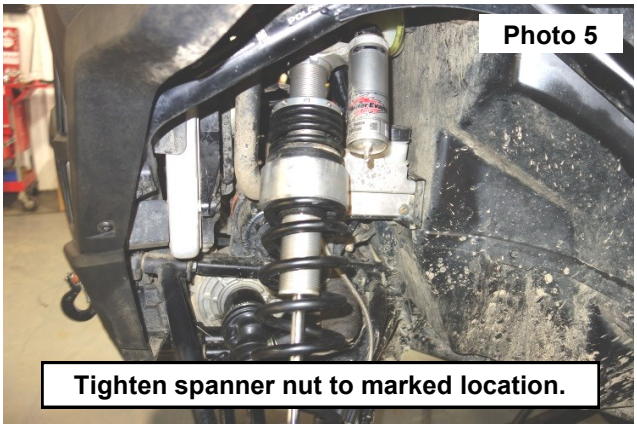



8. Reinstall the lower strut bolt.
9. Put on wheels and lower.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.