TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 93096 Installation Instructions

Polaris Accessory Plug for Factory Pulse Busbar

Part number: 93096

trailfortress.com/rough-country-polaris-accessory-plug-93096

Scan for fitment, price and install help



POLARIS Accessory Plug with Butt Connectors

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

1. Wire the supplied plug to the accessory of your choice, using the supplied butt connectors. Each wire of the accessory plug is labeled.
2. Remove the cap from the accessory port under the hood. **See Photo 1** and **Photo 2**.

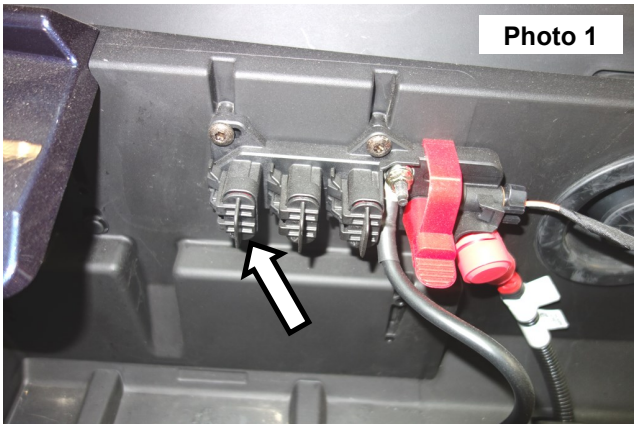

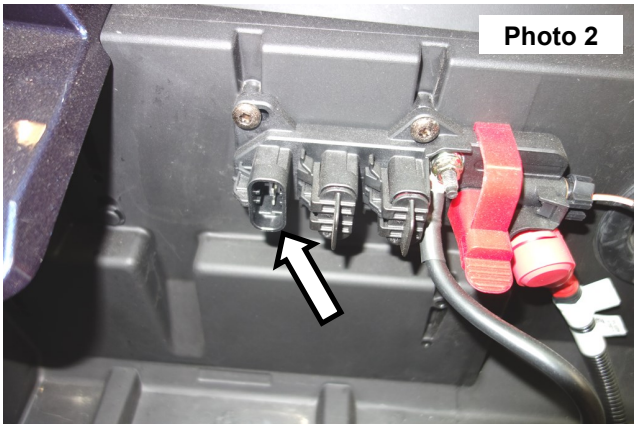

3. Install the wiring harness. **See Photo 3** and **Photo 4**.

