Rough Country 93108 Installation Instructions

Metal Roof for Polaris RZR 170 (2009–2021)

Part number: 93108

trailfortress.com/rough-country-utv-roof-93108

Scan for fitment, price and install help



POLARIS 2012-20 RZR 170 Steel Roof

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS (93108)
Without Light Mounts
Steel Roof x1
Cage Brackets x4
Sponge Seal x1

6MM-1.0x14MM Bolts x4
6MM Flat Washers x8
6MM-1.0 Lock Nuts x4



KIT CONTENTS (93109)
With Light Mounts
Steel Roof x1
Cage Brackets x4
Front Light Mount x1
Rear Light Mount x1
Sponge Seal x1

6MM-1.0x14MM Bolts x18
6MM Flat Washers x26
6MM-1.0 Lock Nuts x18




Torque Specs:


Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

TOOLS NEEDED:
4mm Allen Wrench
10mm Socket/Wrench


INSTALLATION INSTRUCTIONS


1. **NOTE: Skip to step 6, if installing roof without the light mounts**.
2. Place the appropriate light mounts in the front and rear slots (light mount with “Rough Country” is the front mount). **See Photo 1**.
3. Secure the mounts with the supplied 6mm bolts, nuts, and washers using a 4mm Allen wrench and 10mm socket/ wrench. **See Photo 2** and **Photo 3**.

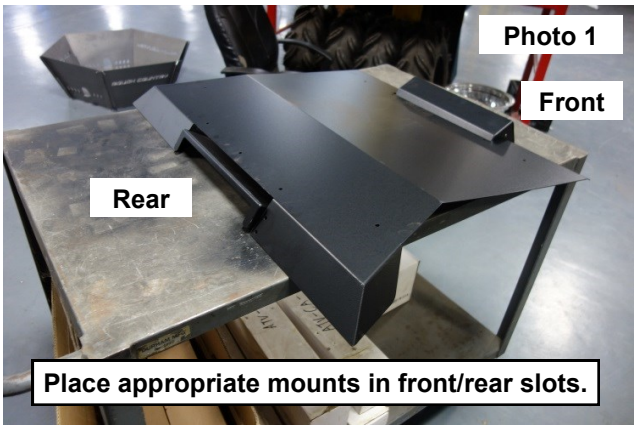

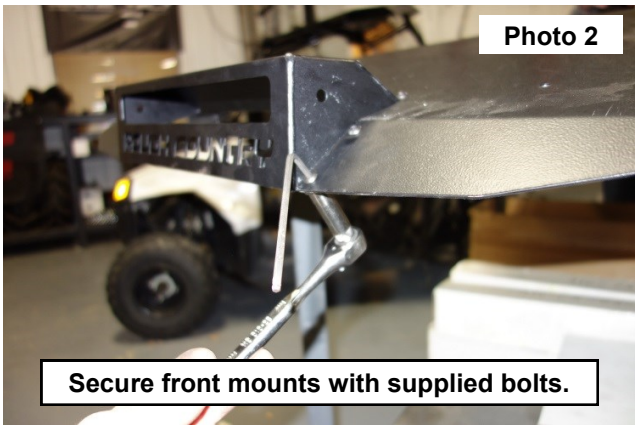



4. Install the lights in the mounts using the hardware supplied with the lights. **See Photo 4**.

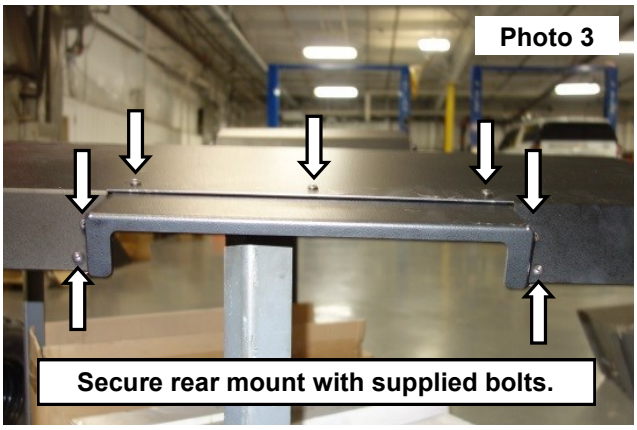

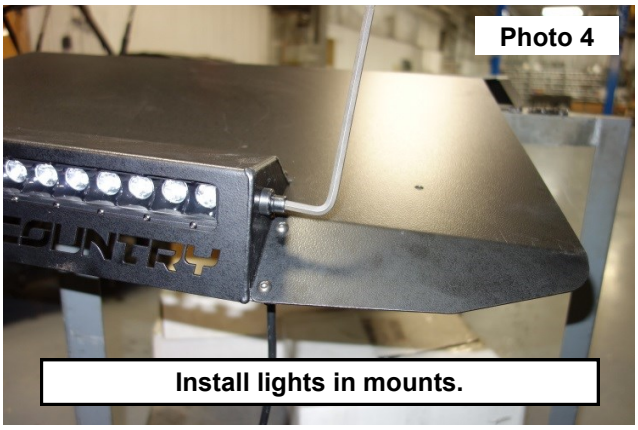

5. Install the sponge seal on the top of the roll cage. **See Photo 5**.
6. Place the roof on the cage and secure the roof with the 4 cage brackets using the supplied 6mm bolts, nuts, and washers. Tighten using a 4mm Allen wrench and 10mm socket/wrench. **See Photo 5** and **Photo 6**.

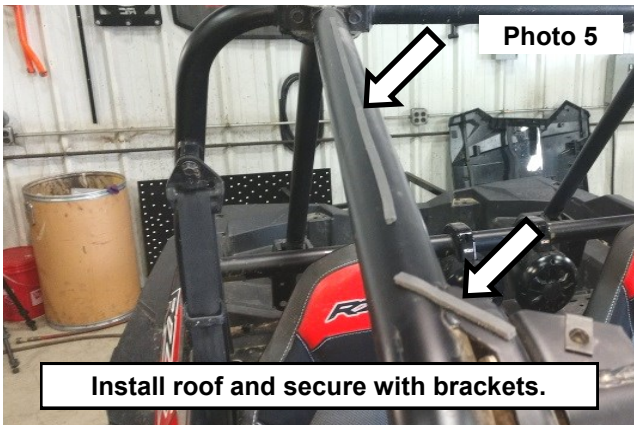

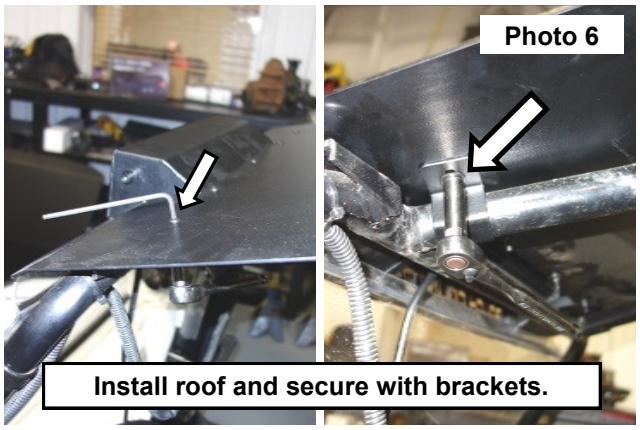

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.