TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 93183 Installation Instructions

40-Inch Rear-Facing LED Kit for 2024–2025 Polaris RZR XP 4 1000

Part number: 93183

trailfortress.com/rough-country-led-light-kit-93183

Scan for fitment, price and install help



Polaris 2024 RZR XP4 1000 Rear Light Bar

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
40” Single Row LED Light Kit x1
Driver Side Light Bracket x1
Pass Side Light Bracket x1

TOOLS NEEDED:
15mm Socket
17mm Socket

HARDWARE INCLUDED:
10mm-1.5 x 55mm Hex Head Bolts x4
10mm Flat Washers x4
10mm-1.5 Nylock Nut x4




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS

1. Remove the (2) rear upper cage mount bolts using a 15mm socket. **See Photo 1.**
2. Place (2) of the supplied spacers onto the slot of the cage mount. **See Photo 2.**

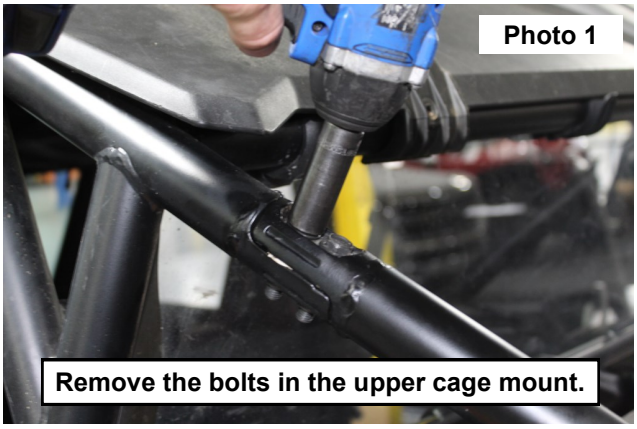



3. Place (2) of the supplied 10mm-1.5 x 55mm hex head bolts and (2) 10mm washers into the (Passengers Side Shown) light bar bracket. **See Photo 3.**
4. Place the (Drivers Side Shown) light bar bracket and bolts into the installed spacers and the upper cage mount. **See Photo 4.**

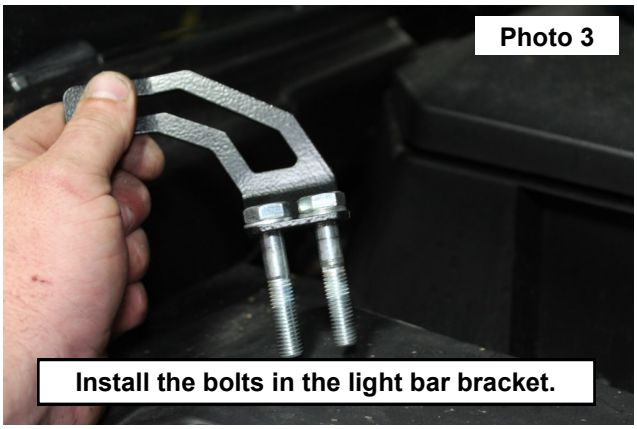



5. Secure the light bar bracket using (2) of the supplied 10mm-1.5 hex head nuts. Thread the bolts into the nylock nut, seat the nut to the underside slot of the cage mount. Tighten the bolts using a 17mm socket. **See Photo 5.**
6. Install the passengers side light bar bracket onto the cage mount. Then install the light bar using the hardware supplied with the light bar kit. **See Photo 6.**
7. Connect the light bar to the UTV's power supply. Set the desired angel of the light bar and tighten the mounting bolts.





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.