Rough Country 93195 Installation Instructions

93195

Part number: 93195

trailfortress.com/rough-country-chainsaw-carrier-93195

Scan for fitment, price and install help



Chainsaw Carrier


Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Spacers x8
Carrier Plates x2
Carrier Mounting Bracket x1
Carrier X Bracket x2
Rubber Bed Mounts x2

TOOLS NEEDED:
13mm Wrench or Socket

HARDWARE INCLUDED:
8mm T-Handle bolt x2
8mm Hex Bolts x8
8mm Hex Nut x8

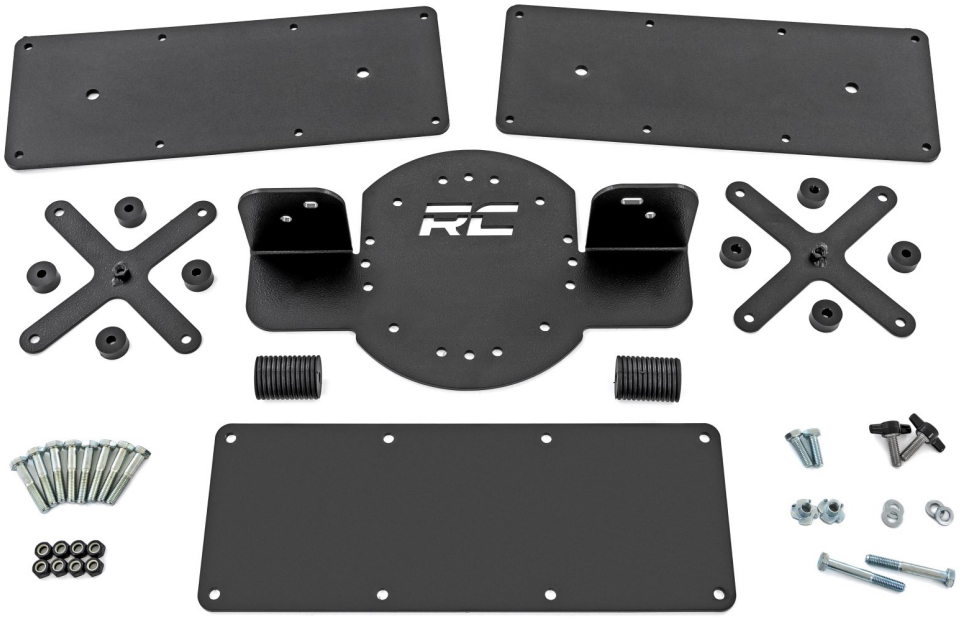


Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS

1. Choose the angel you will need the mounting bracket to be in and align (4) mounting holes. **See Photo 1.**
2. Install the (4) 8mm 1.25 x 45mm hex head bolts into the (2) brackets. **See Photo 2.**

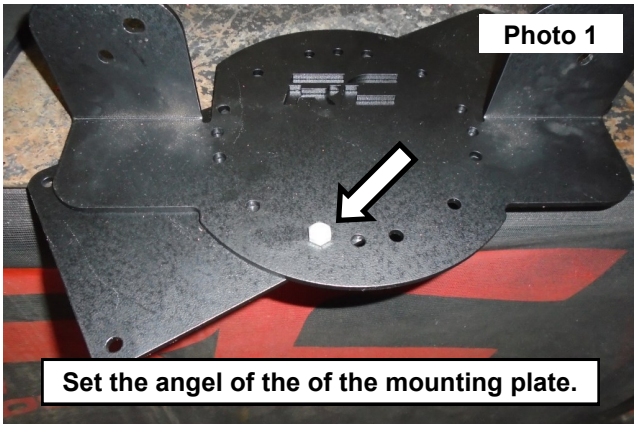




3. Place the spacer onto the installed bolts use (1) pre bolt. **See Photo 3.**
4. Place the back plate with the (2) center holes onto the onto the spacers. **See Photo 4.**

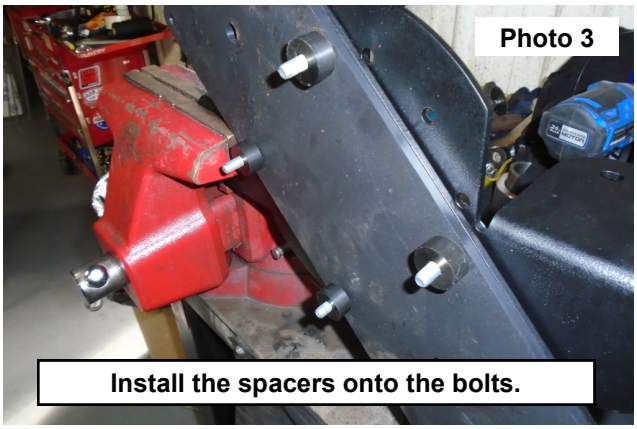





5. Place the X bracket onto the installed bolts and secure using (4) of the supplied 8mm hex head bolts. **See Photos 5 and 6.**



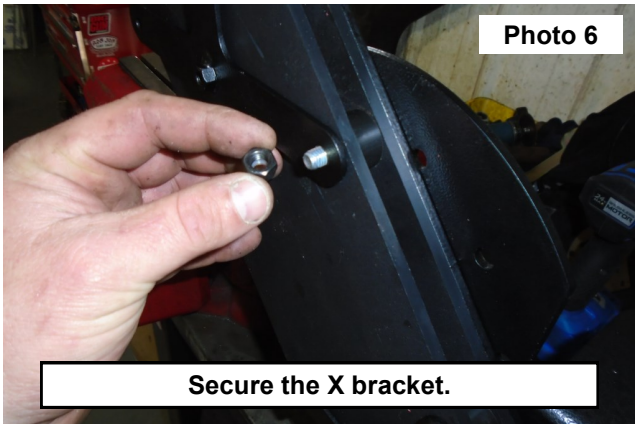


6. Insert the spacers in-between the mounting plates in the remaining holes. Secure using (4) 8mm 1.25 x 45mm hex head bolts into the (2) brackets. **See Photo 7.**
7. Tighten the (8) bolts using a 13mm socket and wrench. **See Photo 8.**

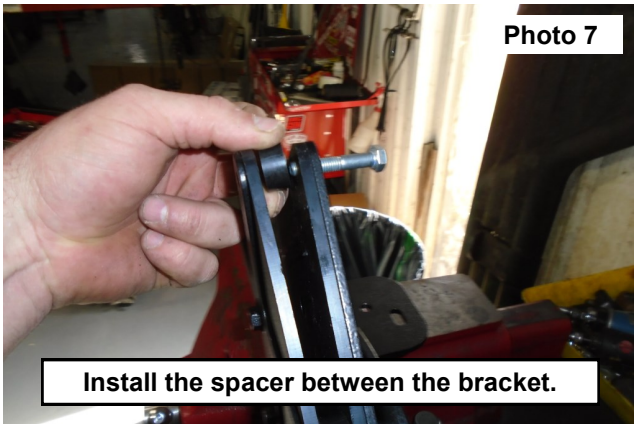

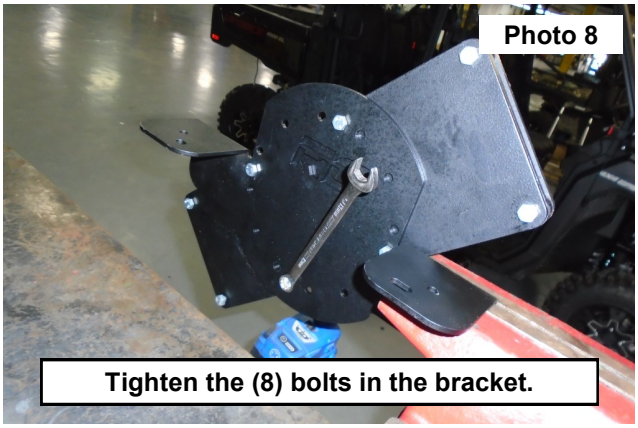



8. Install the 8mm T-Handle bolts into the X brackets. **See Photo 9.**
9. Install the rubber mount just below the taper in the top of the bed. Then remove the eye bolt and washer. Retain for reuse. **See Photo 10.**

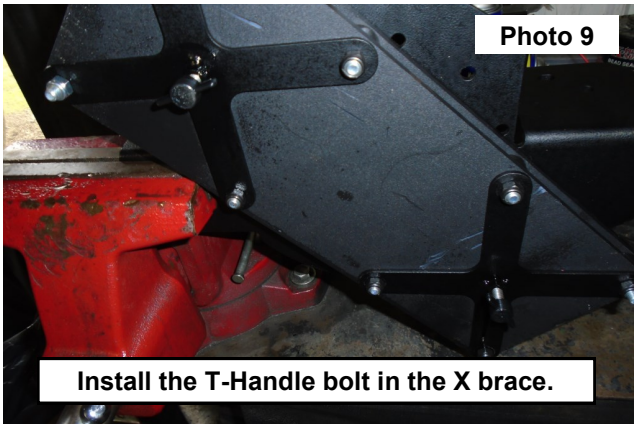



10. Install the bracket assembly onto the bed and align the mounting holes. Secure using the supplied eye bolts and washers. **See Photo 11.**
11. When using the chainsaw carrier rack place the saw into the slot between each bracket, secure the saw using the bolts in the X bracing. **See Photo 12.**

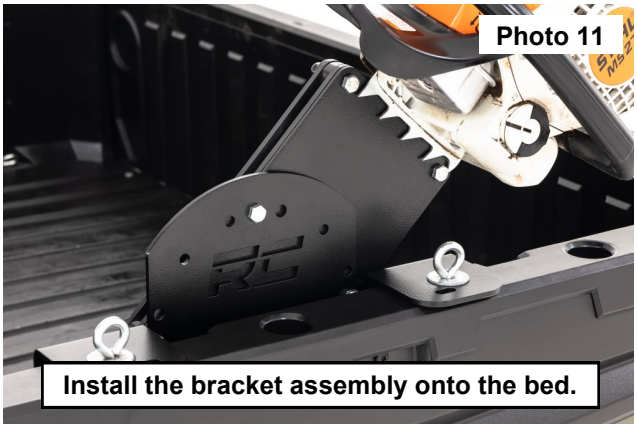

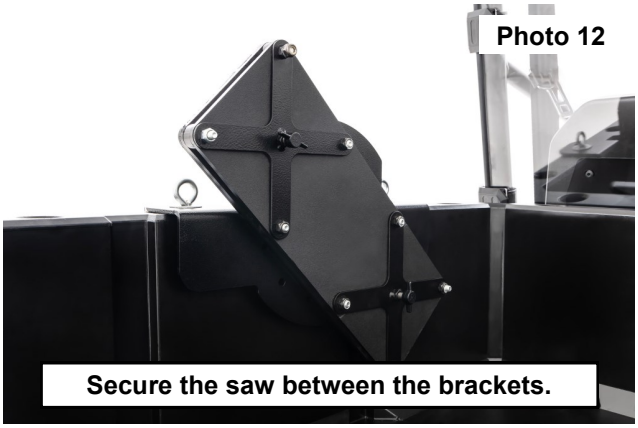

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.


STIHL
MS 271
POLARIS
RANGER
4X4
PRO STAR
POLARIS