TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 94013 Installation Instructions

20 Inch Rear LED Light Bar Kit for Kawasaki Teryx

Part number: 94013

trailfortress.com/rough-country-20-led-light-kit-94013

Scan for fitment, price and install help



Kawasaki 2021 Teryx Rear Light Bar Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
20” Single Row LED Light Kit x1
Driver Side Bracket x1
Pass Side Bracket x1

TOOLS NEEDED:
4mm Allen Wrench

HARDWARE INCLUDED:
6mm-1.0 Body Clip x2
6mm-1.0 x 20mm Button Head Bolt x2
6mm Flat Washer x2



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Clean the mounting surface on each side under the rear bed. **See Photo 1.**
2. Install the mounting clips on each side of the bed into the existing hole. **See Photo 2.**

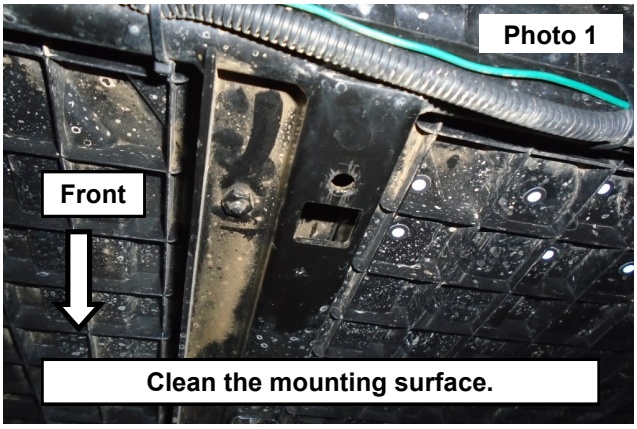



3. Secure the Driver side bracket using (1) 6mm-1.0 x 20mm Button Head Allen Bolt and (1) 6mm Flat Washer. The brackets tabs rest in the square hole with the single light mounting hole toward the rear of the UTV. **See Photo 3.**
4. Secure the Passengers side bracket using (1) 6mm-1.0 x 20mm Button Head Allen Bolt and (1) 6mm Flat Washer. The brackets tabs rest in the square hole with the single light mounting hole toward the rear of the UTV. **See Photo 4.**

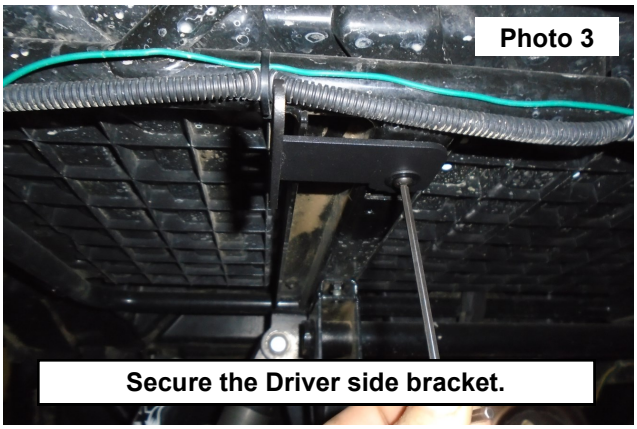

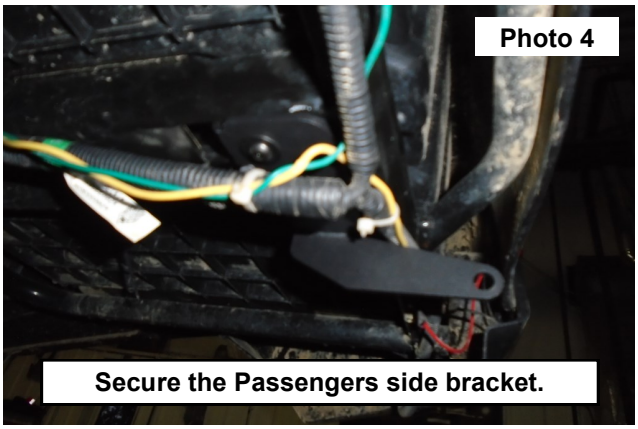

5. Place the LED light in-between the mounting brackets. Secure using the supplied hardware in the lighting kit. **See Photo 5.**
6. Tighten the mounting brackets using a 4mm Allen wrench. **See Photo 6.**
7. Connect the light to a power source on the UTV. Then tighten the light in the desired position.

