TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 94016 Installation Instructions

50 Inch Cage Mount DRL Light Bar Kit for Kawasaki Teryx

Part number: 94016

trailfortress.com/rough-country-led-light-kit-94016

Scan for fitment, price and install help



Kawasaki 2021 Teryx Front 50” Lightbar

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
50” Single Row LED Light Kit x1
Driver Side Bracket x1
Pass Side Bracket x1

TOOLS NEEDED:
17mm Wrench or Socket





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS


1. Remove the top nut on the roll cage using a 17mm wrench and socket. **See Photo 1.**
2. Loosen the lower nut using a 17mm wrench and socket and slide the bracket into the lower bolt. **NOTE:** The bends of the bracket should be toward the inside of the UTV. **See Photo 2.**

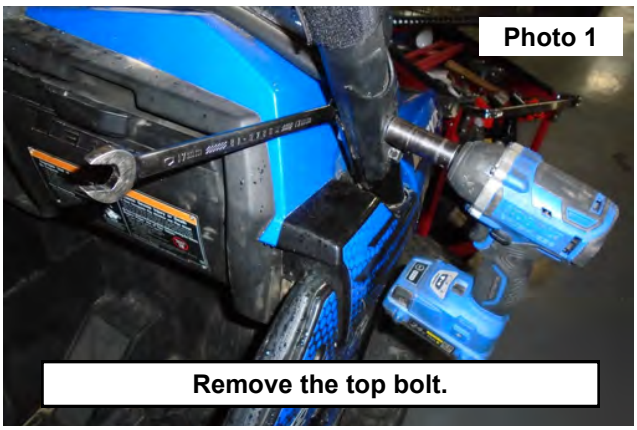

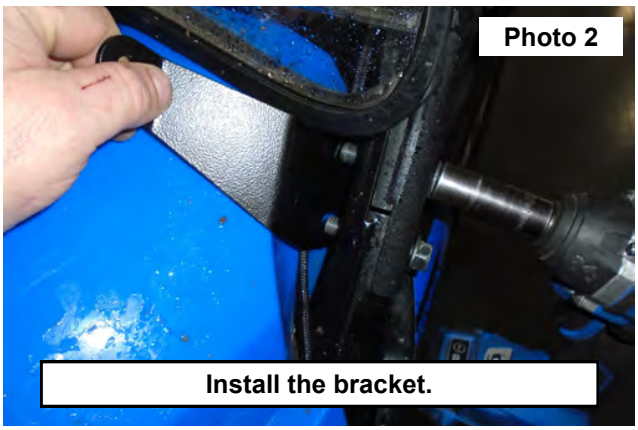


3. Slide the top bolt through the upper hole and secure using the OE nut. **See Photo 3.**
4. Tighten the (2) nuts and bolts using a 17mm wrench and socket. **See Photo 4.**
5. Repeat steps using steps 1-4 for installation on the opposite side.

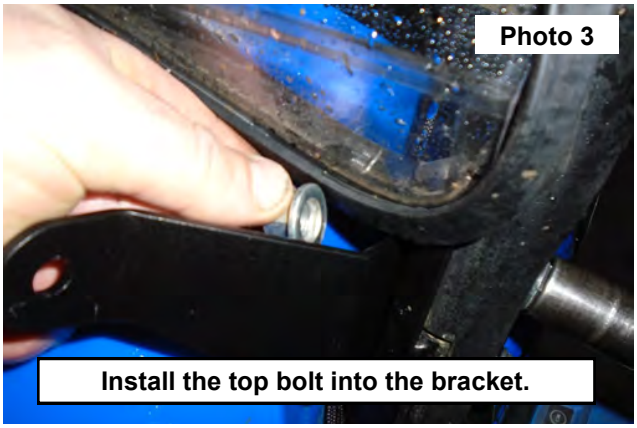

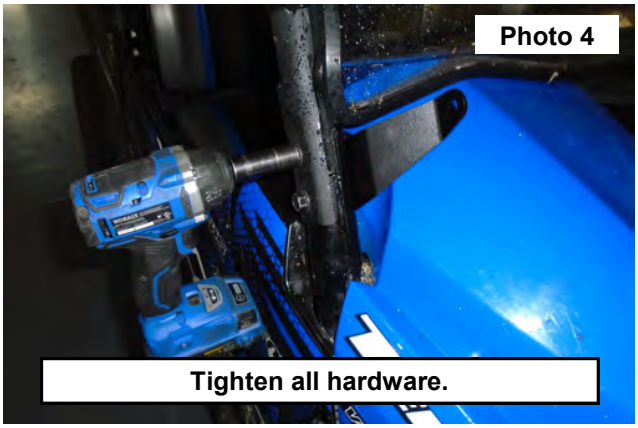

6. Install the light using the supplied hardware in the light kit. Set the light to the desired angle and tighten. **See Photo 5.**

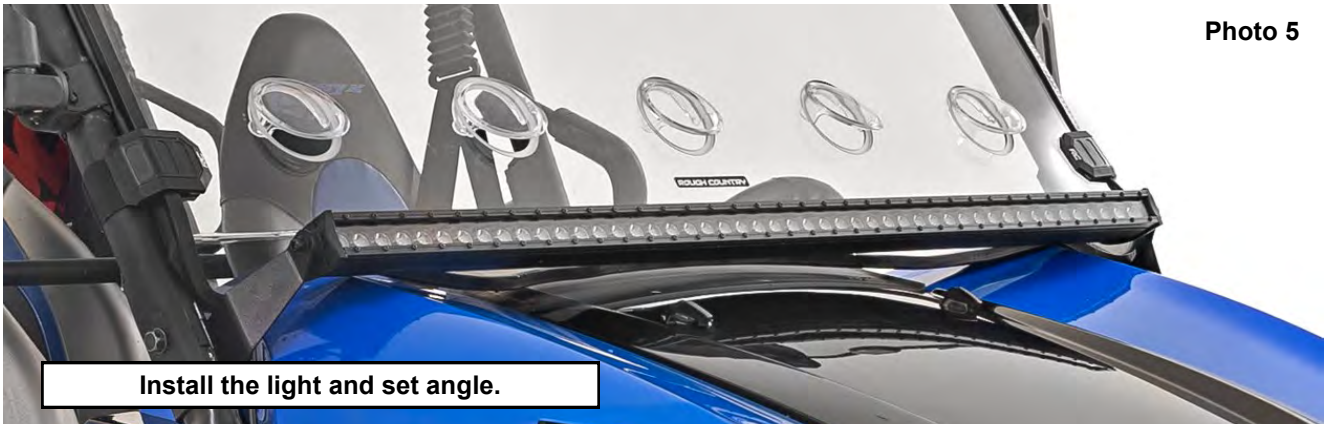

POST INSTALLATION INSTRUCTIONS

1. Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floorboards, and wiring harness.
2. Check electrical wiring to ensure adequate clearance between all rotating, mobile, fixed, and heated members.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.