TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 97015 Installation Instructions

2-Inch Receiver Hitch for Can-Am Maverick 1000R (2013-2018)

Part number: 97015

trailfortress.com/2-inch-receiver-hitch-can-am-maverick-1000r-rough-country-97015

Scan for fitment, price and install help



CAN-AM 2017-20 Maverick Receiver Hitch

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Receiver Hitch x1

TOOLS NEEDED:
17mm Socket.
15mm Wrench and Socket

HARDWARE INCLUDED:
12mm-1.75 x 85mm Hex Head Bolt x4
1/2" Flat Washers x4
1/2" x .400 Spacers x4



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Use a jack to lift the rear of the UTV up enough to take the load off of the suspension, install jack stands.
2. Clean the area around the rear control arm and tie rod end bolts. **See Photo 1.**
3. Using a 15mm wrench and socket, remove the 2 upper control arm bolts and the 2 bolts in the tie rod ends. **See Photo 2**. Retain hardware for reuse.

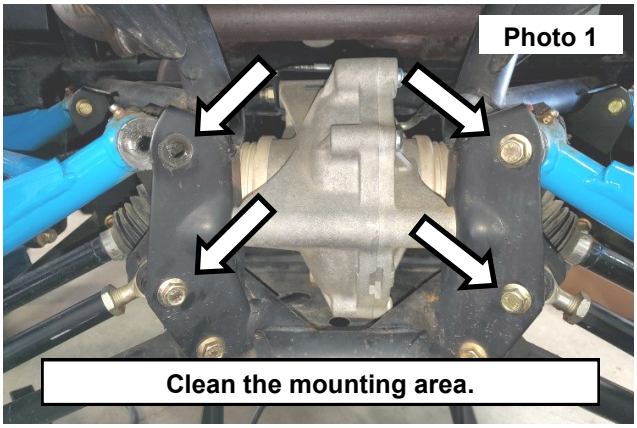

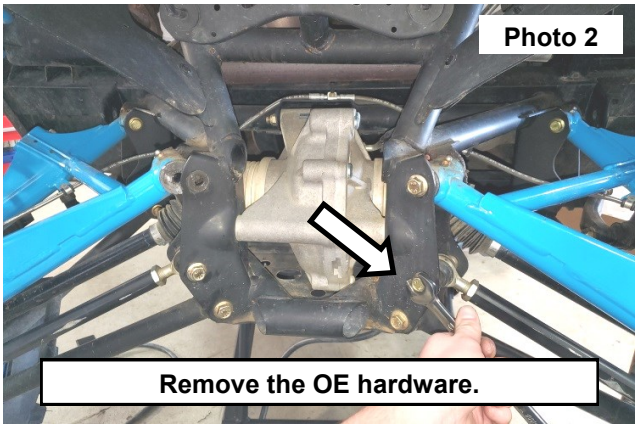

4. Locate the receiver hitch.
5. Install (1) 12mm-1.75 x 85mm Bolts and (1) 12mm washer into the hitch. Then install the supplied spacer onto the bolt from the back side of the hitch. **See Photo 3.**
6. Install the hitch onto the UTV using (1) spacer and 12mm bolt at each mounting point of the hitch, secure using the OE nuts. **See Photo 4.**

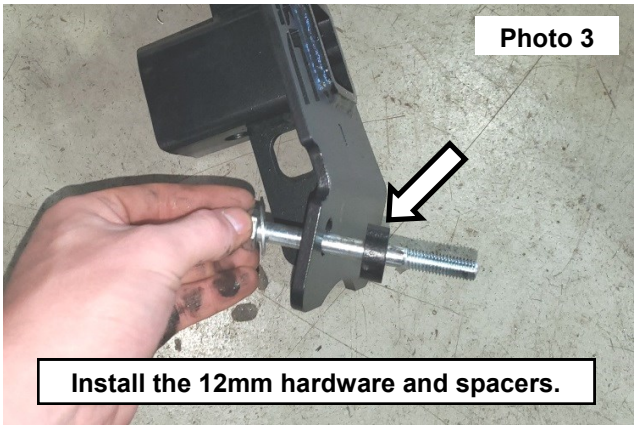

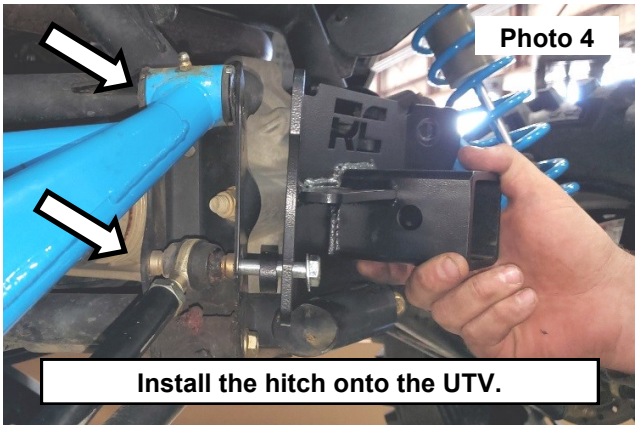

7. Lift the rear or the UTV up using a jack and remove the jack stands, lowering the vehicle onto the ground.
8. Tighten the upper control arm bolts using a 17mm socket and 15mm wrench. **See Photo 5.**
9. Tighten the tie rod end bolts using a 17mm socket and 15mm wrench. **See Photo 6.**



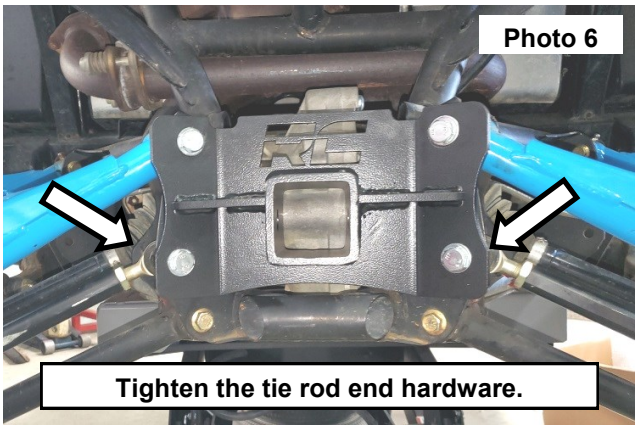

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.