TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 97020 Installation Instructions

6-Inch LED Light Bar Cowl Kit for Can-Am Maverick X3 (2017-2025)

Part number: 97020

trailfortress.com/rough-country-led-light-kit-97020

Scan for fitment, price and install help




# CAN-AM 2020 Maverick X3 Cowl 6” LED Mount

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**

**6” Single Row LED Light Kit x1**
**Light Bracket Driver Side x1**
**Light Bracket Passenger Side x1**


**TOOLS NEEDED:**

**10MM Wrench or Socket**
**4MM Allen wrench**

**HARDWARE INCLUDED:**

**6MM-1.0 x 20MM Button Head Bolts x4**
**6MM-1.0 x 12MM Hex Head Bolts x2**
**6MM Flat Washers x8**
**6MM-1.0 Nylock Nuts x4**



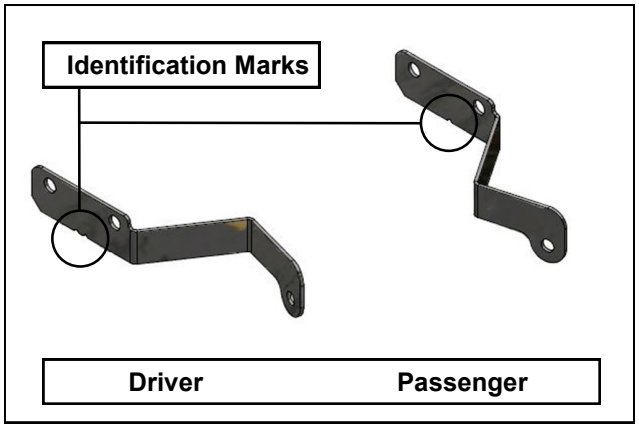


**Torque Specs:**

| Size | Class 8.8 | Class 10.9 |
|---|---|---|
| 6MM | 5ft/lbs | 9ft/lbs |
| 8MM | 18ft/lbs | 23ft/lbs |
| 10MM | 32ft/lbs | 45ft/lbs |
| 12MM | 55ft/lbs | 75ft/lbs |
| 14MM | 85ft/lbs | 120ft/lbs |
| 16MM | 130ft/lbs | 165ft/lbs |
| 18MM | 170ft/lbs | 240ft/lbs |

**NOTE:** These brackets have notches identifying the Driver and Passengers side brackets.

## INSTALLATION INSTRUCTONS

1. Remove the hood cover. It just pops off. **See Photo 1.**
2. Attach the Driver and Passenger side light brackets to the 6” LED light with the 6MM-1.0 x 12MM bolts. **See Photo 2.**










3. Place the light and bracket assembly above the fins in order to drill the proper holes. **See Photo 3.**
4. Clamp the bracket to the UTV and drill a 9/32” (7MM) hole through the bracket hole. **See Photo 4**.

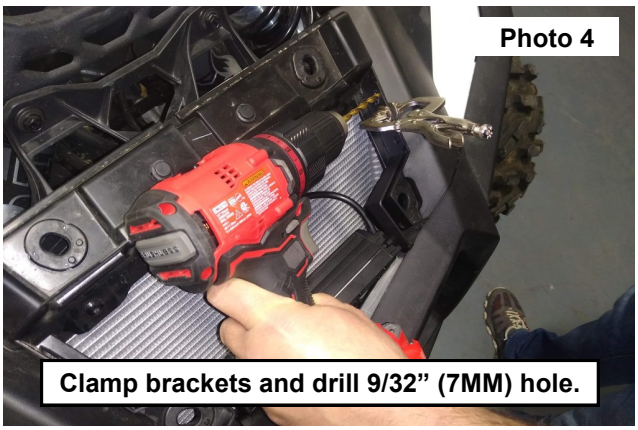


5. Repeat for the remainder 3 holes.
6. Secure light and bracket assembly with the 6MM-1.0 x 20MM bolts, washers, and nuts. **See Photo 5.**
7. Tighten with a 4MM allen wrench and a 10MM wrench. **See Photo 6**.

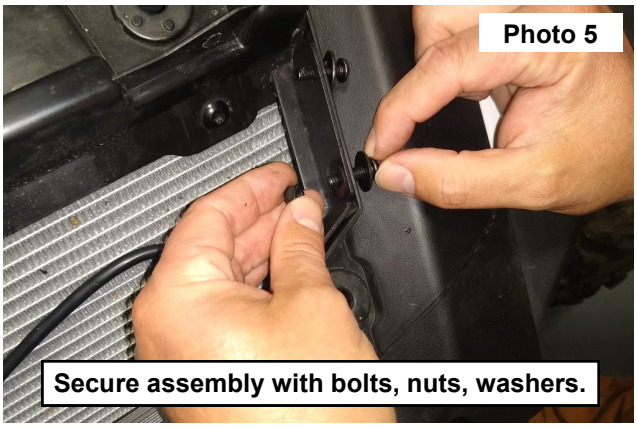


8. Refer to the instructions that came with the LED light to connect the wiring harness to the UTV.
9. Reinstall hood cover.

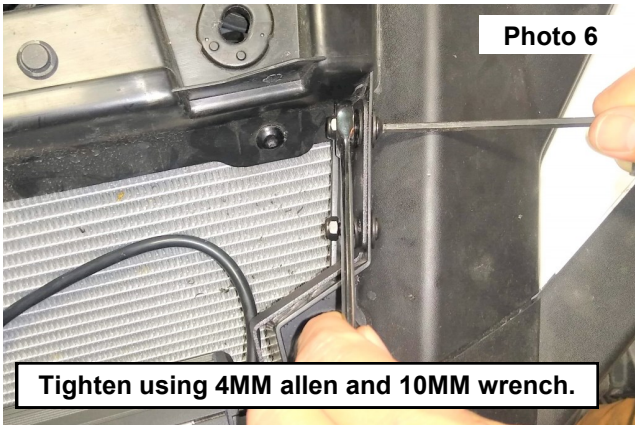By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.