TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 97026 Installation Instructions

Black Series LED Rear Light Kit for Can-Am Maverick X3 (2017–2025)

Part number: 97026

trailfortress.com/rough-country-led-light-kit-97026

Scan for fitment, price and install help




# CAN-AM 2020 Maverick X3 Rear Dual Slimline Tail Light Mount

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
6” LED Light Kit x2
Slim Line Tail Light Mounting Bracket x2
Hitch Mount Light Wire Extension x1

**TOOLS NEEDED:**
4MM Allen Wrench
RC Nutsert Tool Kit (PN# 10583)
1/2” Wrench
25/64 (W) Drill
Drill Motor
10mm Socket
Ratchet

**HARDWARE INCLUDED:**
6MM-1.0 x 20MM Button Head Bolt x4
6MM Flat Washer x4
6MM x 1 Blind Nut Insert x4
6MM x 35MM Bolt x1
5/16” Nut x1
6MM Flat Washers x2

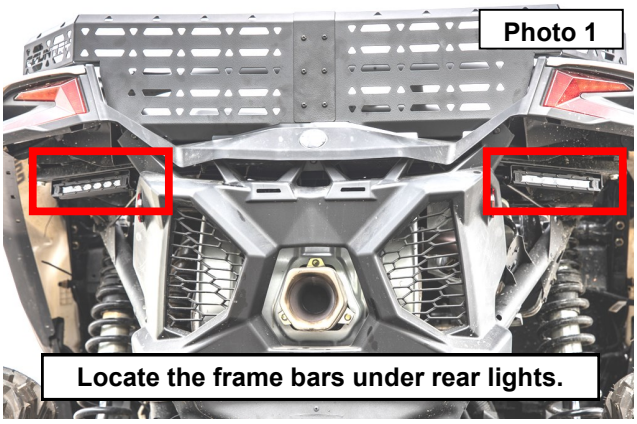


**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |

## INSTALLATION INSTRUCTONS

1. Locate the bars under the rear lights to mount the brackets. **See Photo 1**.
2. Mark the center of the holes in the bracket using a paint pen. **See Photo 2.**

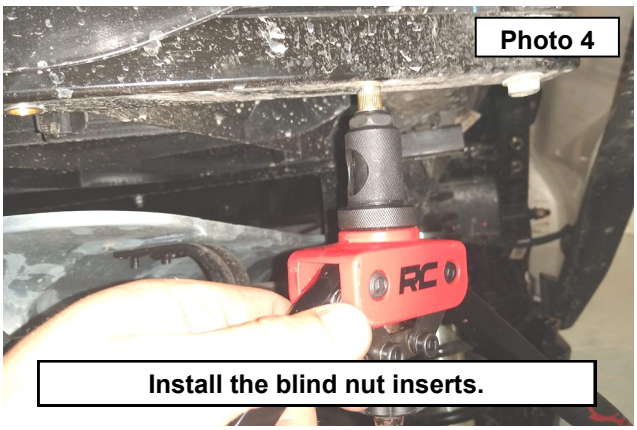




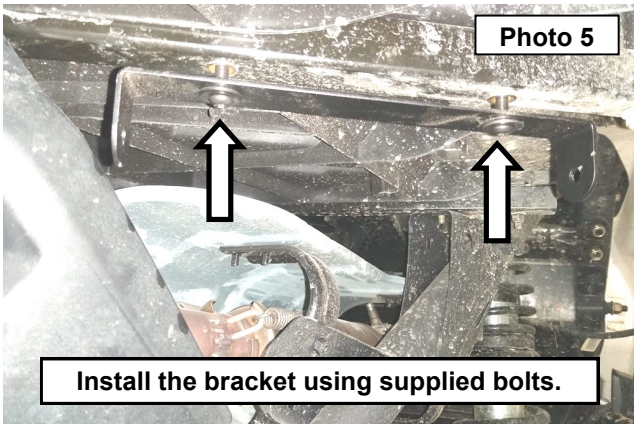


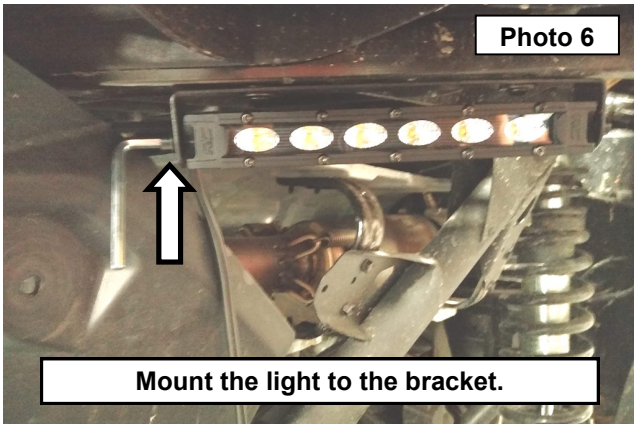
3. Using a 25/64 (W) drill bit, drill the center of the marked holes. **See Photo 3.**
4. Install the blind nut inserts using the Nutsert tool. **See Photo 4.** Use the supplied 6mm x 35mm bolt and the supplied 5/16" nut and 6mm washers, to install the threaded insert if you do not have an installation tool. Slide a 6mm washer, the 5/16" nut, and another 6mm washer over the 6mm x 35mm bolt. Thread the bolt into the threaded insert. Hold the 5/16" nut using a 1/2" wrench. Tighten the 6mm x 35mm bolt using a 10mm socket, this will cause the threaded insert to mushroom inside of the frame , locking it in place.




5. Mount the bracket using the supplied bolts. **See Photo 5.**
6. Mount the light to the bracket using the bolts supplied with the light. **See Photo 6.**
7. Install the wiring harness using the corresponding instruction sheet supplied with the light.
8. Connect the light bar to the wiring harness.




By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.