TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 99035 Installation Instructions

Under-Seat Locking Storage Box for Jeep Wrangler (2007-2017)

Part number: 99035

trailfortress.com/rough-country-storage-box-99035

Scan for fitment, price and install help

921990350

ROUGH COUNTRY SUSPENSION SYSTEMS®

JEEP 2007-18 JK Under Seat Storage Box

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Under Storage Box x1
Keys x2
Rear Bracket x1
Front Bracket x1

TOOLS NEEDED:
3mm Allen Wrench
18mm Socket
Ratchet
Wire Tie

HARDWARE INCLUDED:
5-0.8 x 12mm Button Head Bolts x7



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Install the mounting brace on to the rear of the storage box using (4) of the supplied 5-0.8 x 12mm button head bolts. Tighten using a 3mm allen wrench. **See Photo 1.**
2. Install the front mounting bracket using (3) of the supplied 5-0.8 x 12mm button head bolts. Tighten using a 3mm allen wrench. **See Photo 2.**

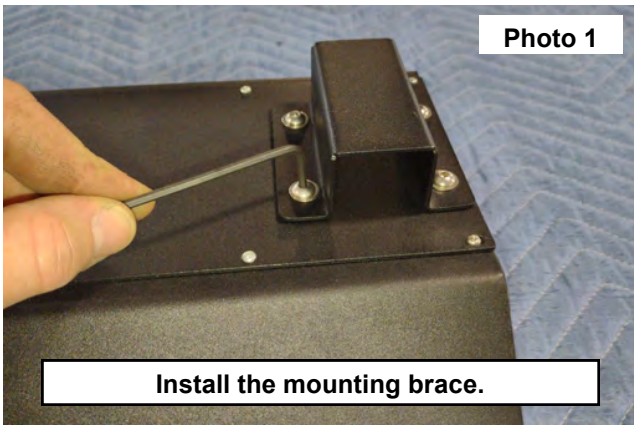

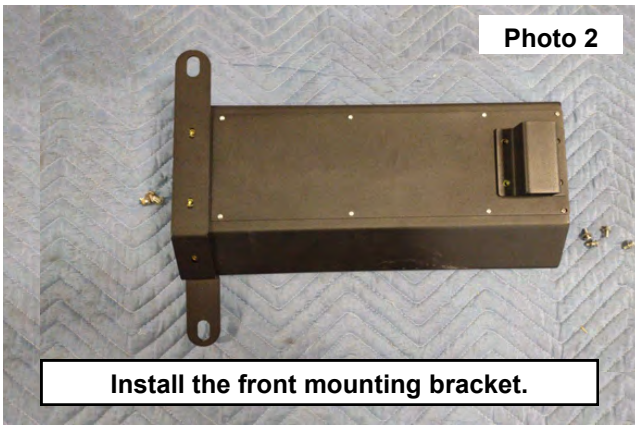

3. Loosen the (2) rear driver seat bolts using a 18mm socket. **See Photo 3.**
4. Remove the front (2) driver seat bolts using a 18mm socket. Retain for later use. **See Photo 4.**

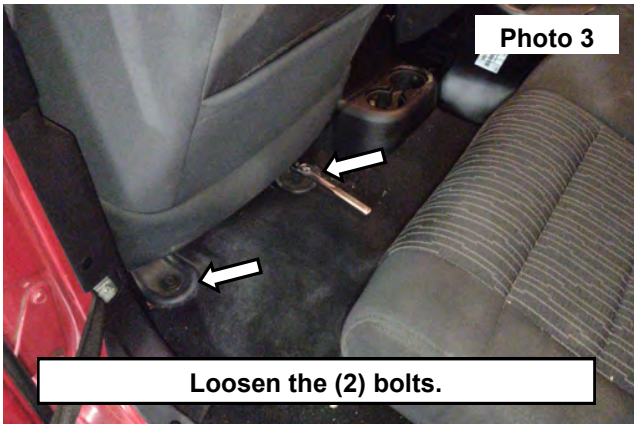

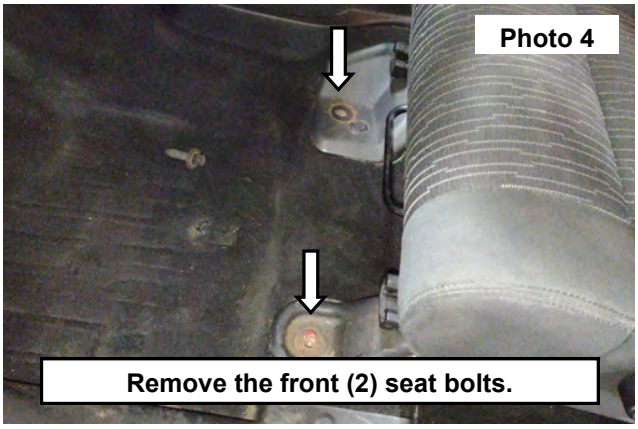

5. Lift the seat up and access the wiring harness bracket under the seat and remove the plug clipped to the bracket. **See Photo 5.**
6. Using a T30 Torx bit remove the (2) bolts from the seat frame and then remove the bracket. **See Photo 6.**

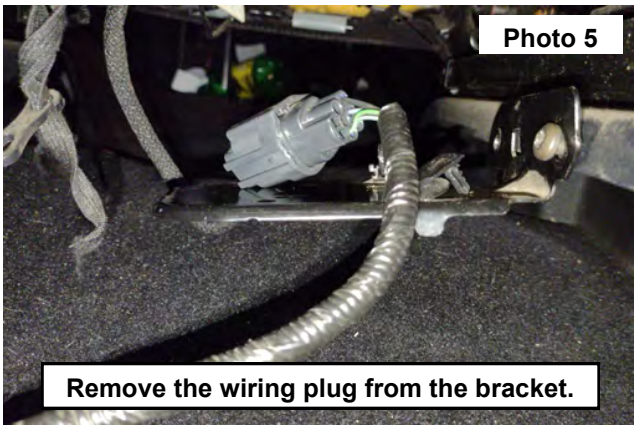

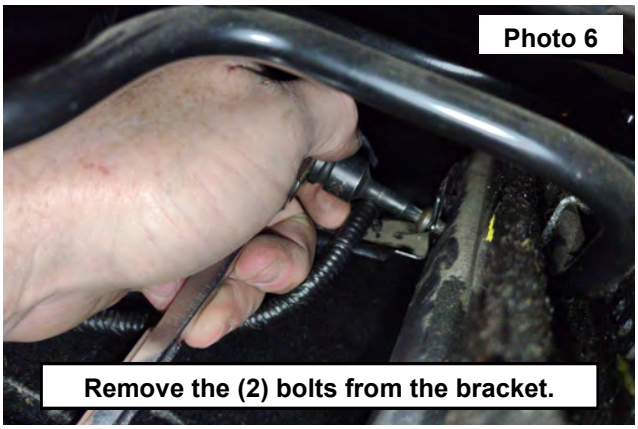

7. Secure the wiring harness to the seat frame using a wire tie. **See Photo 7.**
8. Place the storage box under the seat aligning the holes in the bracket with the threaded holes in the vehicle floor. **See Photo 8.**

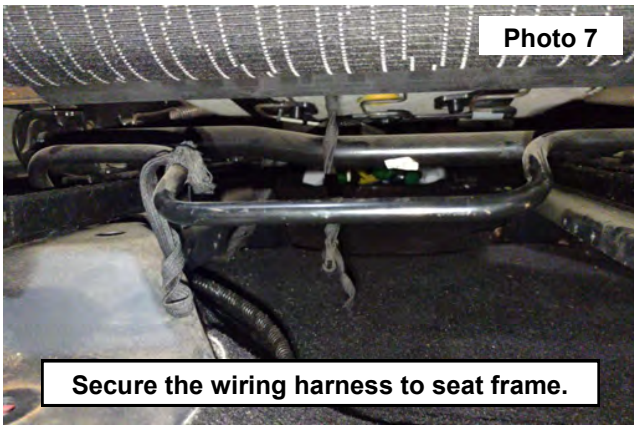

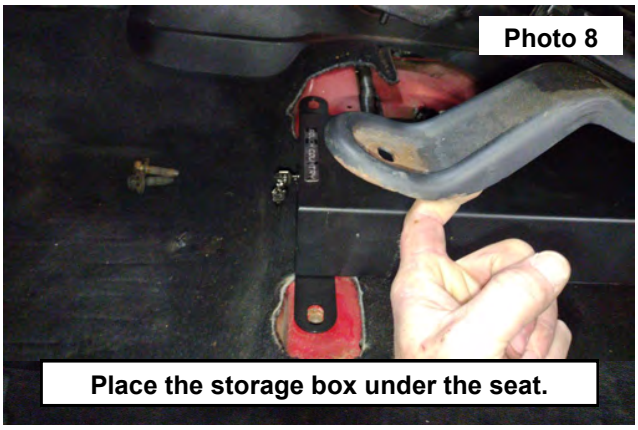

9. Lower the seat into position. Then tighten the front and rear seat bolts using an 18mm socket. **See Photos 9 and 10.**

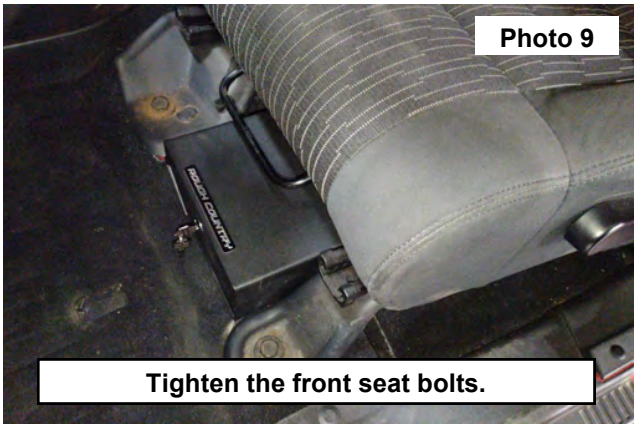

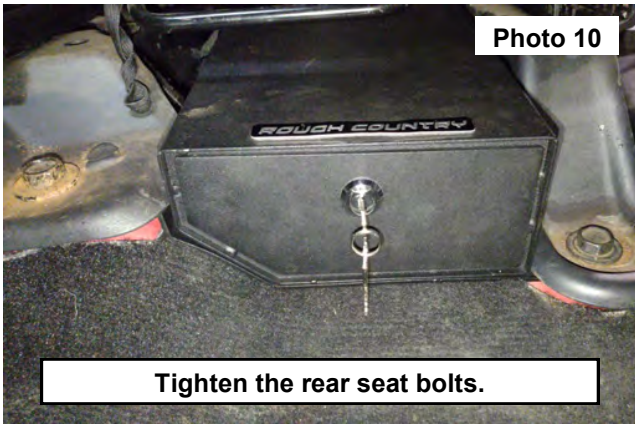



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.