Rough Country 99062A Installation Instructions

10L Gray Fluid Container with Locker (2.6 Gallon)

Part number: 99062A

trailfortress.com/rough-country-10l-fluid-container-w-locker-gray-99062a

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

921990650

ROUGH COUNTRY LIQUID CONTAINER MOUNTING KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Hardware Included:
6mm Clip Nuts
6mm Button Head Bolts
6mm Washer

TOOLS REQUIRED:
4mm Allen Wrench



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Install supplied 6mm clip nuts onto the supplied MOLLE strap. **See Photo 1.**
2. Place MOLLE strap with clip nuts behind the MOLLE panel. **See Photo 2.**



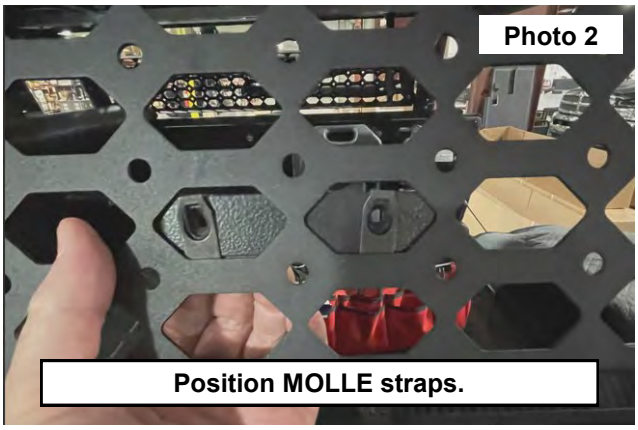

3. Place the back side of the container holder over the MOLLE strap. Use supplied 6mm bolts and washers to secure the back side of the container holder. Secure with a 4mm Allen wrench. Do not fully tighten. **See Photo 3 and Photo 4.**

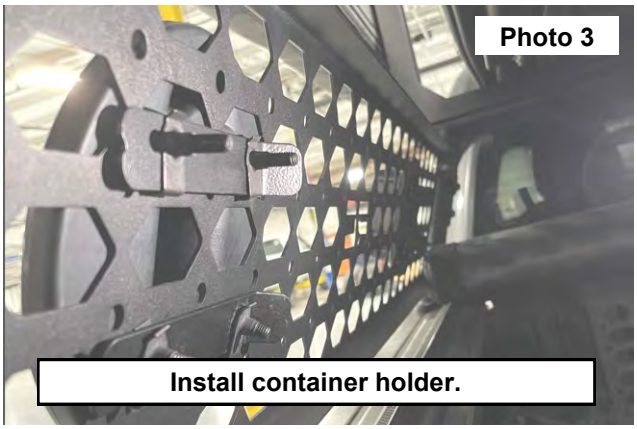

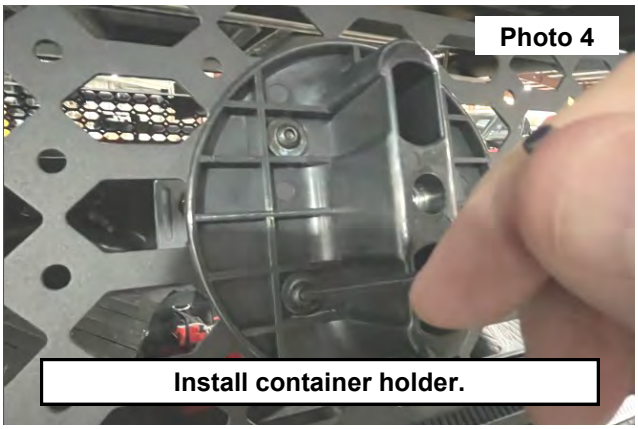

4. Place the liquid container over the previously mounted container holders to get the final fitment. Once desired fit is achieved, tighten the 6mm button head bolts with a 4mm Allen wrench.
5. Mate the top side of the container holder to the secured bottom side. Thread the handle of the container holder in. NOTE: Make sure the hole in the handle is aligned with the hole in the top side holder. **See Photo 5.**
6. Place the uninstalled lock cylinder into the unlocked position. Slide the unlocked cylinder into the threaded mounting handle all the way. Lock the cylinder to secure. **See Photo 6.**



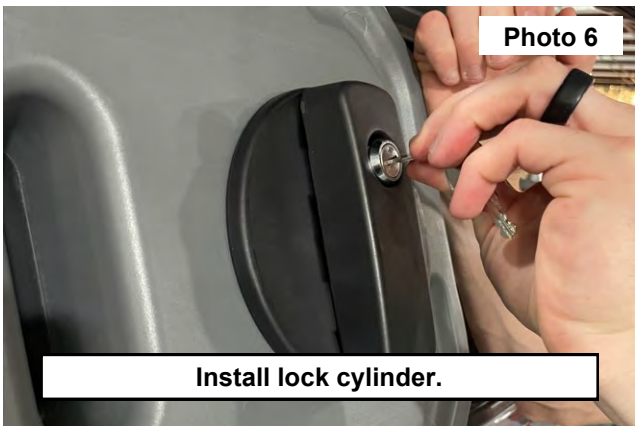

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.