TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 99214 Installation Instructions

Spare Axle Mount for 1.75-Inch UTV Cage Tubing

Part number: 99214

trailfortress.com/spare-axle-mount-1-75-inch-utv-cage-tubing-rough-country-99214

Scan for fitment, price and install help



UNIVERSAL SPARE AXLE CAGE MOUNT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Spare Axle Cage Mount
Spare Axle Cage Mount Cage Clamp
Spare Axle Cage Mount Axle Clamp

Hardware Included:
8 - 6mm Lock Nut
8 - 6mm x 20mm Button Head Bolt

TOOLS REQUIRED:
4mm Allen Wrench
10mm Wrench

⚠NOTICE **This product is designed for any 1.75” OD roll cage.**



Torque Specs:


Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

trailfortress.com/spare-axle-mount-1-75-inch-utv-cage-tubing-rough-country-99214

INSTALLATION INSTRUCTONS

1. Place the axle (not included) into the cage mount and secure using the 6mm bolts and lock nuts. Tighten with a 4mm Allen wrench and 10mm wrench. See Photo 1.
2. Place assembly onto desired location of the roll cage.
3. Secure the cage mount to the cage clamp around the roll cage once the mount is in the desired location. Use supplied 6mm bolt and lock nut. Tighten with a 4mm Allen wrench and 10mm wrench.



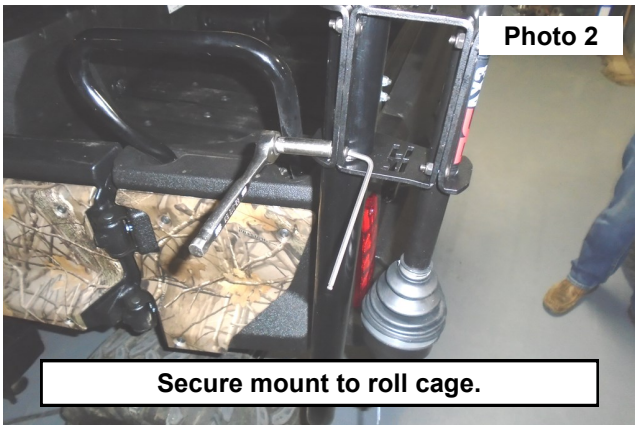

POST INSTALLATION INSTRUCTIONS

1. Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floorboards, and wiring harness.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.