TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country F-F11612A Installation Instructions

Pocket Fender Flares for Ford Bronco Sport AWD (2021-2025)

Part number: F-F11612A

trailfortress.com/pocket-fender-flares-ford-bronco-sport-awd-rough-country-f-f11612a

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®

Bolt-On Fender Flares Ford Bronco Sport (21-on) FIT-FF977

Important: Please read instructions entirely before installing this product.

Hardware Included	QTY
Extrusion	18 ft
Alcohol wipe	6

Hardware Included	QTY
"U" Style clip	26

Bolt Kit Included (Bolt-On look flare only)	QTY
Nuts	26
Allen Key Bolts	26

Ensure that both left and right hand front Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Fender Flares will not work with factory installed flares. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion. **No drilling of vehicle is required for Bolt-On Look Fender Flares. This is a non-drill product.**

***PRIOR TO ANY PAINTING & INSTALLATION, PRODUCT SHOULD BE THOROUGHLY INSPECTED FOR ALL COMPONENTS LISTED ABOVE. PRODUCT SHOULD ALSO BE TEST FITTED PRIOR TO ANY PAINTING & INSTALLATION. PLEASE CONTACT ROUGH COUNTRY FOR ANY FITMENT QUESTIONS AND OR MISSING COMPONENTS.**

***For Rugged look flares begin installation at STEP 2.**

***For purchased Color Matched Flares begin installation at STEP 4.**

PAINTING INSTRUCTIONS – If Fender Flares are being painted; do not install edge extrusion until painting is complete. Prior to painting, clean all surfaces to be painted using clean water and a mild detergent, do not use lacquer thinner or any solvent based products. Wipe completely dry. Best results will be achieved by wiping the areas to be painted with a tack rag just prior to painting. Most automotive paints can be applied directly to the Fender Flares, however some may require a primer (check paint manufacturer specifications). Good adhesion will be achieved without sanding. Select a paint (and primer if necessary) that is suitable for rigid plastics PMMA (Acrylic). If using a paint system that requires baking, do not expose the product to temperatures above 70°C (158°F). Do not fit the extrusion or any of the hardware



STEP 1: Attach the bolts and nuts to each Fender Flares using a 3/16" Allen key and a 10mm wrench/socket (wrench /socket and Allen key not supplied). Ensure inside of Fender Flares where the rubber seal is attached is clean, using the alcohol wipes provided. Wipe away any residue with a dry clean cloth.




STEP 2: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Ensure pressure is used to secure rubber seal to Fender Flare edge. Attach rubber seal along the top leading edge of the Fender Flare where it will make contact with the vehicle body.

Bolt-On Fender Flares Ford Bronco Sport (21-on) FIT-FF977




STEP 3: Pulling at right angles to the extrusion, remove the liner from the extrusion in small portions and apply thumb pressure to ensure that it adheres to the Fender Flares.

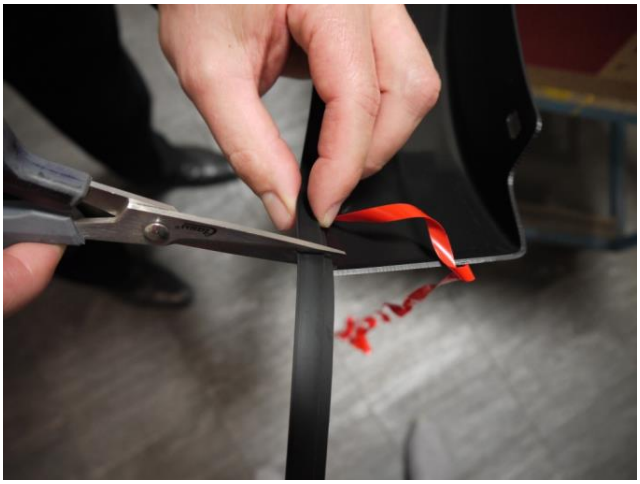

STEP 4: Trim any unnecessary extrusion and discard.



STEP 5: Clean the body areas where the Fender Flares will make contact with a clean cloth.

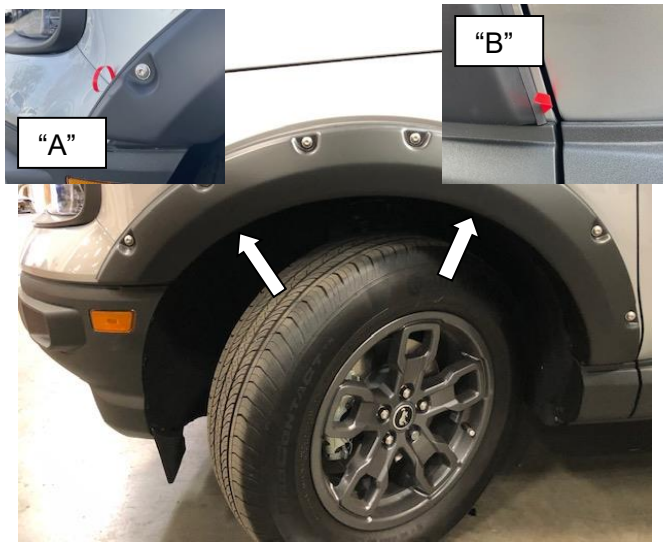

STEP 6: Pull red tape liner back 1-1/2”, front and back of the Fender Flare, as shown in images “A” and “B” above. Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the vehicle body. Use 2 of the retaining clips provided to secure the Fender Flare to the body starting at the positions pointed out above. Be sure the clips “snap” securely into the slotted hole of the Fender Flare.

Bolt-On Fender Flares Ford Bronco Sport (21-on) FIT-FF977





STEP 7: Continue to install the (3) remaining clips once fender flare is seated correctly. Be sure that the clips "snap" securely into the slotted hole of the fender flare. Once all clips have been installed, pull the exposed red tape liner and apply mild pressure to adhere properly to the vehicle.

STEP 8: Repeat installation method for other side. Double check the front Fender Flares to make sure all clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.


REAR FENDER FLARE INSTALLATION



STEP 9: Clean the body areas where the Fender Flares will make contact with a clean cloth.



STEP 10: As performed prior in Step 6, Pull red tape liner back 1-1/2 on both fender flares. Place the Fender Flares onto the vehicle and fit into the correct position following the contours of the vehicle body. Use 4 of the retaining clips provided and secure the Fender Flare to the body starting at the positions pointed out above. Be sure the clips "snap" securely into the slotted hole of the Fender Flare.

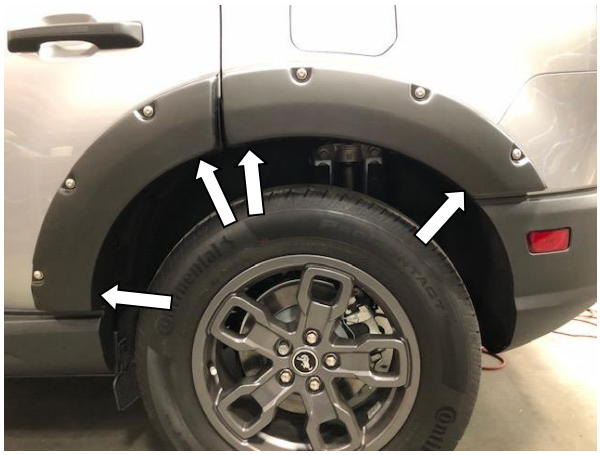

STEP 11: Continue to install the (4) remaining clips once fender flare is seated correctly. Be sure that the clips "snap" securely into the slotted hole of the fender flare. Once all clips have been installed, pull the exposed red tape liner and apply mild pressure to adhere properly to the vehicle.



STEP 12: Repeat installation method for other side. Double check the front Fender Flares to make sure all clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.