TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country F-T12421-202 Installation Instructions

6-Inch-Tall Pocket Fender Flares for Toyota Tacoma (2024-2025)

Part number: F-T12421-202

trailfortress.com/6-inch-tall-pocket-fender-flares-toyota-tacoma-rough-country-f-t12421-202

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

WARNING: *This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to* ***www.P65Warnings.ca.gov.***

2024 TOYOTA TACOMA TRADITIONAL STYLE FLARES

PRIOR TO INSTALLATION

A) Install the flares according to these written instructions with the hardware provided. WARNING: Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to, using alternative installation methods, hardware, or materials. DO NOT USE: Loctite, Superglue, or similar products on the hardware or the flares. *Install flares on cleaned vehicle surfaces*.

B) **Fit:** Verify the fit of the flares to vehicle prior to installation (some filing, sanding, or cutting may be necessary to ensure proper fit).

C) **Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER. Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high-quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.

D) **Performance:** Using larger tires may increase the area required to turn the vehicle. Some tire/rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.

E) **Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)

F) **Metal Protection:** All exposed fasteners and bare metal should be treated with
rust resistant paint BEFORE installing flares. Spray inner fender wells with undercoating AFTER flare attachments have been completed.

G) **Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

H) **Care & Cleaning:** Fender flares are built to last; any detergent you use to wash your vehicle is sufficient to clean the flare. Do not use any harsh abrasive detergents.

TOOLS FOR EASY INSTALLATION:

- Soft Cloth or Alcohol Wipe
- Vise Grips or Pliers
- Socket Wrench
- 10mm Socket
- Pry Tool

PLEASE READ: Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Manufacturer is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS: To claim warranty you must provide Proof of Purchase.

Rev 1 03-25-24

trailfortress.com/6-inch-tall-pocket-fender-flares-toyota-tacoma-rough-country-f-t12421-202

INCLUDED IN HARDWARE KIT:

1. 

Push-In Pocket Hardware, Brushed Metal
44 pcs

2. 

Push-In Pocket Hardware, Black
44 pcs

3. 

#14 “U” Clip
4 pcs


4. 

20mm Hex Screw
32 pcs

5. 

Wiper Style Edge Trim
342 inches

IF YOU PURCHASED GLOSSY BLACK FLARES (CODE “RCGB”):

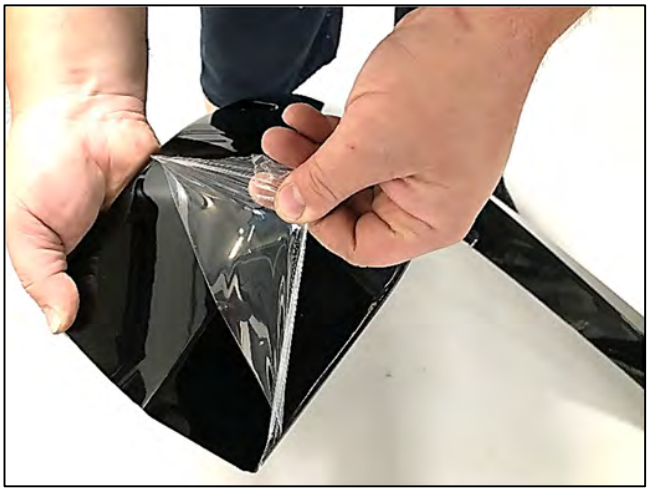

Prior to beginning installation process, peel the protective liner from each plastic piece included in the flare kit – all flares and inner pieces.

NOTE: It will be difficult to remove liner once edge trim and hardware are installed.


Once liner is removed, take care not to scratch flare surfaces. If flare needs to be cleaned, wipe gently with a clean soft cloth.

SECTION 1: EDGE TRIM INSTALLATION

Using a debris-free soft cloth or alcohol wipe, clean vehicle at areas of installation.

Peel 2-3 inches of red vinyl backing away from supplied edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the side of the vehicle).

Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare. Trim edge trim flush with ends of flare.

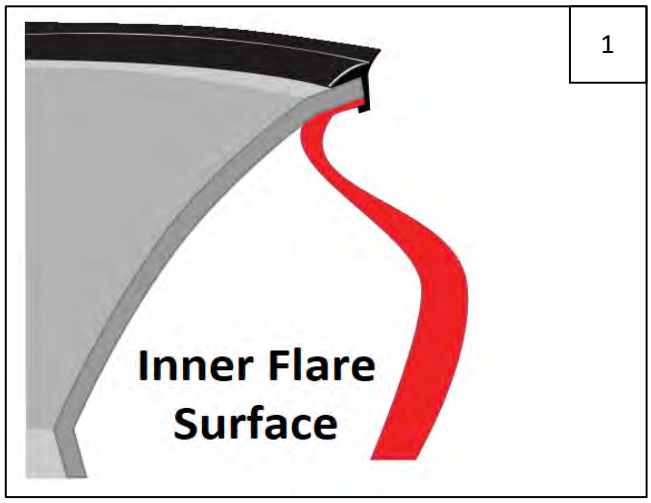

SECTION 2: PUSH-IN POCKET HARDWARE INSTALLATION




Peel liner from tape on Push-In Pocket Hardware (brushed metal or black as preferred). NOTE: There will be extra Push-In Pocket Hardware.



Insert Push-In Pocket Hardware into each flare pocket hole (on outer flare surface, 8 places each front flare, 9 places each rear). Push in to engage clip and tape adhesion.

PLEASE NOTE: *if your vehicle is equipped with factory fender flares (TRD Pro, Trail Hunter models), these will need to be removed prior to installation of Rough Country flares.*

SECTION 3: FRONT FLARE INSTALLATION

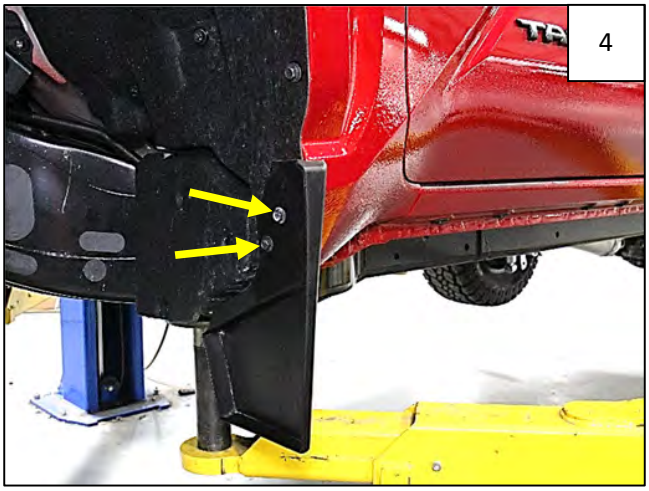

If factory mudflap is present, remove 2 factory screws indicated by arrows.




Remove 1 factory screw from underside of mudflap. Remove and discard mudflap.



Remove 6 factory screws from wheel well as indicated by arrows.




Attach 2 supplied #14 “U” Clips to supplied Inner Bracket as shown. Left Front Bracket is marked as “LF” and Right Front Bracket is marked as “RF”

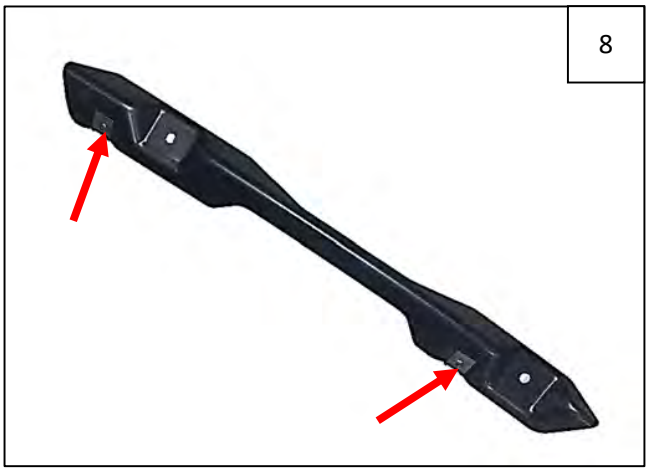


Clip locations.



Align holes in Inner Bracket with uppermost holes in fender. Start 2 supplied 20mm Hex Screws through Inner Bracket and into holes in fender. Tighten screws.

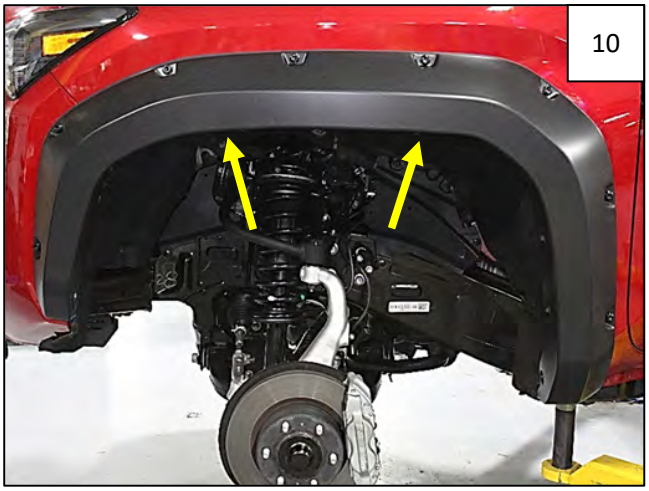

Aligning flare on fender and pressing toward vehicle, start 2 supplied 20mm Hex Screws through flare and into clips installed on Inner Bracket. Do not tighten.

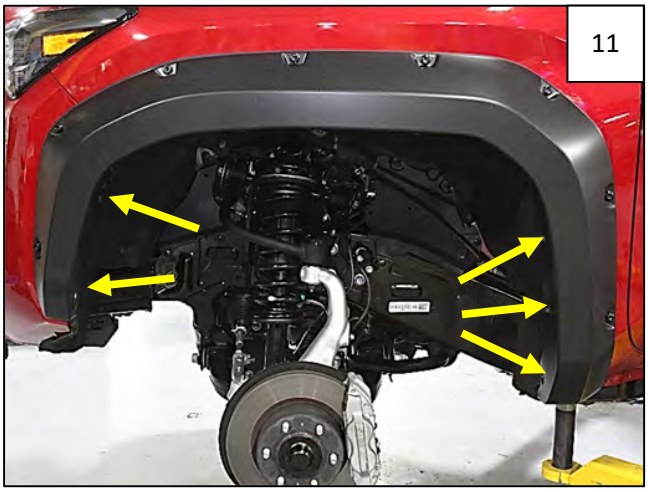

Install 5 supplied 20mm Hex Screws through remaining holes in flare and into holes in fender. Do not tighten.




Apply pressure to flare towards vehicle body at each fastening point and tighten all fasteners.



Complete Front Flare Installation.


SECTION 4: REAR FLARE INSTALLATION

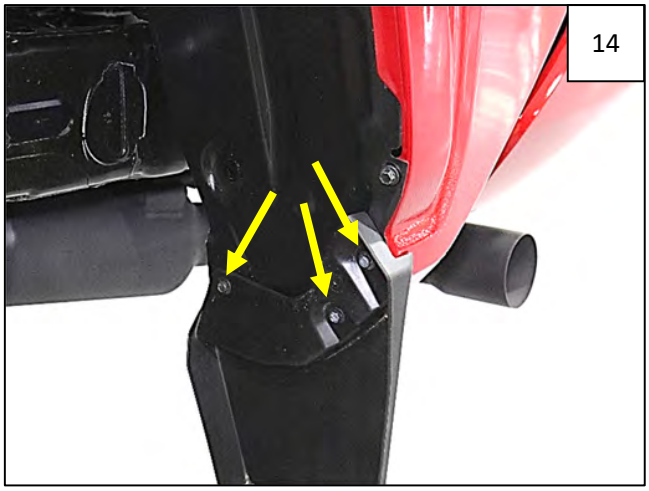


If factory mudflap is present, remove 3 factory screws indicated by arrows.



Remove 1 factory screw from underside of mudflap at rear.

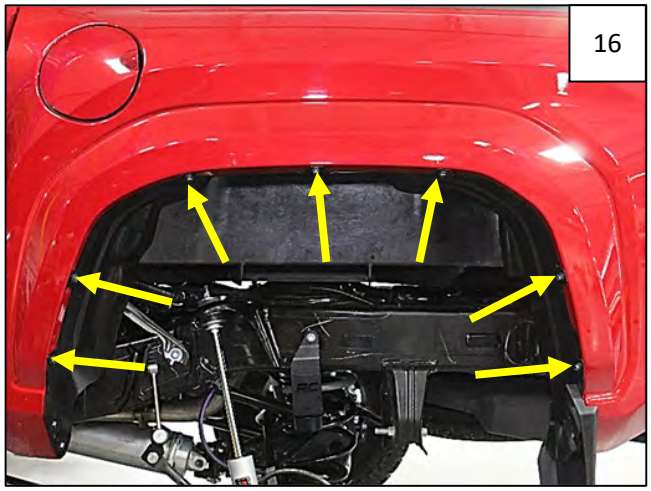

Remove 6 factory screws from fender as indicated by arrows.

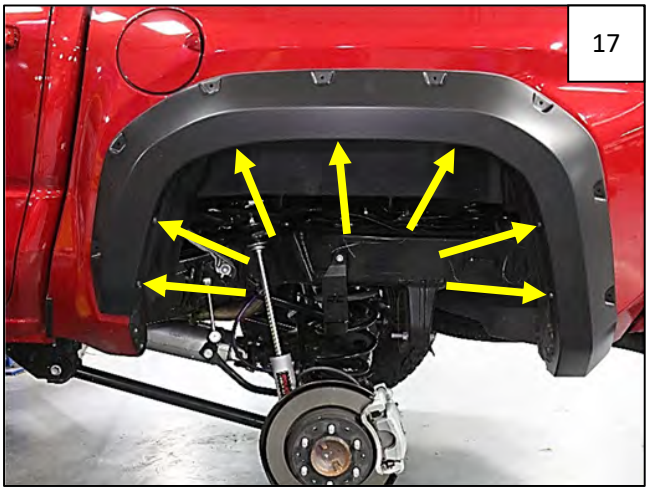

Aligning flare on fender and pressing toward vehicle, start 7 supplied 20mm Hex Screws through flare and into fender as indicated by arrows. Do not tighten.



Apply pressure to flare towards vehicle body at each fastening point and tighten all fasteners.



Complete Rear Flare Installation.