TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country HS10010-GBA Installation Instructions

Hood Scoop for 2019–2025 Chevrolet Silverado 1500

Part number: HS10010-GBA

trailfortress.com/hood-scoop-chevrolet-silverado-1500-rough-country-hs10010-gba

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

WARNING: This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to www.P65Warnings.ca.gov.

2019-2024 CHEVY SILVERADO HOOD SCOOP

PRIOR TO INSTALLATION

A) Install the parts according to these written instructions with the hardware provided. WARNING: Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to, using alternative installation methods, hardware, or materials. DO NOT USE: Loctite, Superglue, or similar products on the hardware or the flares. *Install parts on cleaned vehicle surfaces*.

B) **Fit:** Verify the fit of the parts to vehicle prior to installation (some filing, sanding, or cutting may be necessary to ensure proper fit).

C) **Painting:** (Optional) if paint is desired it must be done prior to installing parts on vehicle. Clean outer surface with a good grade degreaser. DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER. Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for TPO plastic as per your paint system manufacturer's recommendations is required. Paint parts using a high-quality enamel, or polyurethane automotive paint.

D) **Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint BEFORE installing parts

E) **Decals:** Parts may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of parts.

F) **Care & Cleaning:** Parts are built to last; any detergent you use to wash your vehicle is sufficient to clean the part. Do not use any harsh abrasive detergents.

TOOLS FOR EASY INSTALLATION:

- Soft Cloth or Alcohol Wipe
- Grease Pencil
- Masking Tape
- Sharpie Marker

PLEASE READ: Manufacturer is not responsible for any damage, and the installation of our parts is done with the buyer's understanding that this scratching and paint wear may occur.

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS: To claim warranty you must provide Proof of Purchase.

INCLUDED IN HARDWARE KIT:

1.



Alcohol Wipe
4 pcs

Rev 1 07-24-24


SECTION 1: HOOD SCOOP INSTALLATION




Vehicle surface must be free of dust and dirt and dry. Use supplied alcohol wipe to clean hood at areas of tape. Alternately: **Clean area with alcohol or degreaser.**



Before peeling any tape, place part carefully on hood. Using a grease pencil, mark hood along edge of part.

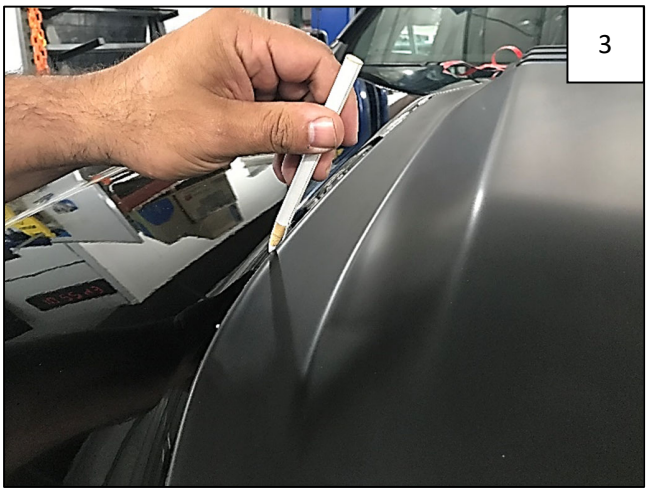

Mark along opposite edge of part. Remove part and check both marks to make sure they are evenly placed along hood feature. If placement is good, proceed to Step 4.

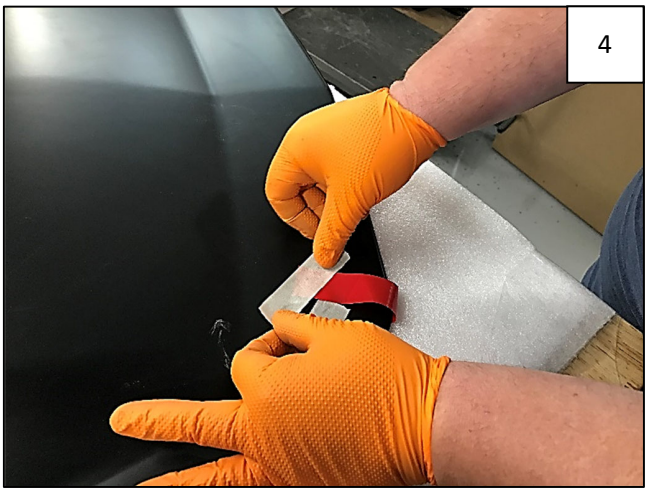

Peel 2-3 inches from each piece of tape around perimeter of part. Use masking tape to secure tape leaders to outside of part.



Use a sharpie to mark each tape leader in order shown above. This is the order in which you will peel the tape.



Peel red liner *completely* from 4 pieces of tape located in center of part.




Replace part on hood, slowly and carefully aligning with marks made in Steps 2-3. **NOTE:** At this time, it is possible to adjust the part position before tape adhesion.



Lower part onto hood, maintaining position. Once the tape begins to contact the hood, adhesion is immediate. Press center of part to adhere four center tape pads.



Begin pulling red tape leaders in order shown in Step 6, discarding masking tape. Carefully pull each tape leader at a 45-degree angle away from part into interior of vehicle to release from the tape, pressing against part as you go.

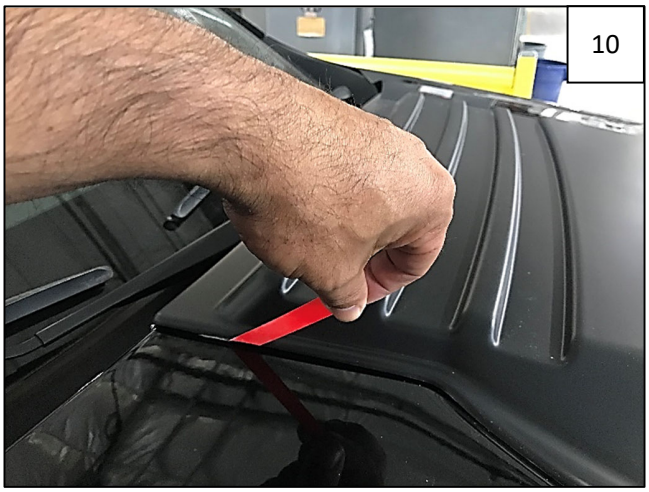

Pull rest of tape leaders in numbered order. Carefully pull red tape leader at a 45-degree angle up away from the part to release from the tape, pressing against part as you go.



Press part against vehicle at areas of tape for 30 seconds to ensure full adhesion. Tape cures after 24 hours at 65 degrees.



Completed Hood Scoop Installation.