TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country RCG1583CCB Installation Instructions

Nerf Steps for Colorado & Canyon Crew Cab 5' Bed (2015-2023)

Part number: RCG1583CCB

trailfortress.com/rough-country-nerf-steps-rcg1583ccb

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

GM 2015-24 COLORADO/CANYON NERF STEP

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Contents:
1 - Driver Side Step
1 - Passenger Side Step
3 - Driver Side Bracket
3 - Passenger Side Bracket

Tools Needed:
13mm Socket/Wrench

Hardware Included:
RCG1583CCABAG1
- 12 - 8mm x 30mm Bolt
- 12 - 8mm Lock Washer
- 12 - 8mm Flat Washer
- 12 - 8mm Clip Nut


RCT2480CCBAG1
- 12 - 8mm x 20mm Hex Head Bolt
- 12 - 8mm Flat Washer
- 12 - 8mm Serrated Flange Nut


Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTIONS

1. Locate factory step mounting holes. Install supplied clip nuts in the shown locations. **See Photo 1.**
2. Attach the step tube to the driver side brackets using the 8mm hardware from RCT2480CCBAG1. Tighten with two 13mm wrenches. **See Photo 2.**

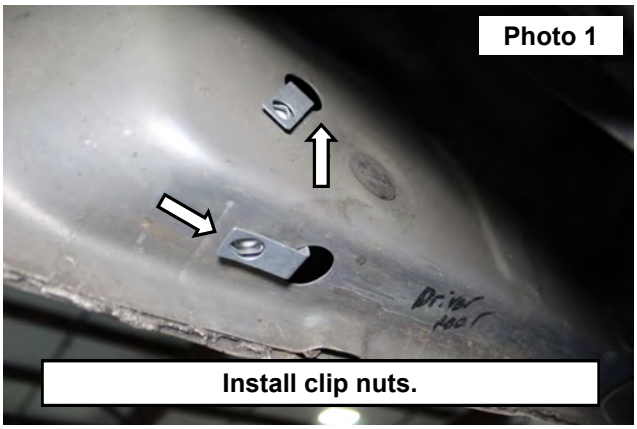

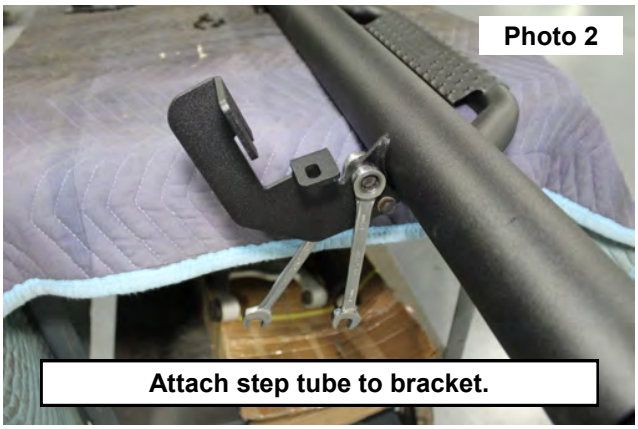

3. With assistance, lift the assembled step to the driver side rocker panel where the previously installed clip nuts are. Fasten the brackets to the clip nuts using the 8mm hardware from RCG1583CCABAG1. Tighten with a 13mm socket. **See Photo 3.**
4. Repeat for other side.

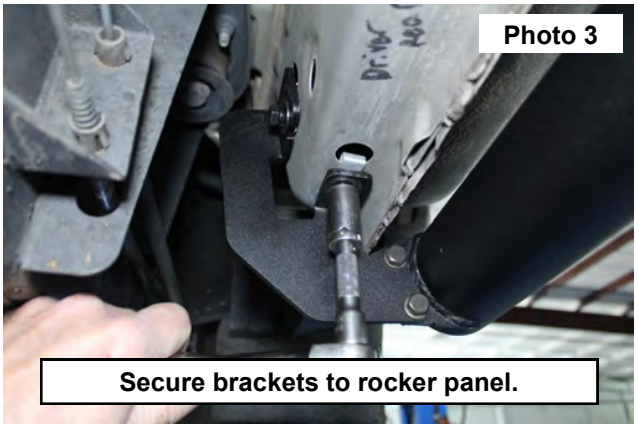

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.