TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country RS185 Installation Instructions

Tow Hook and Bezel Kit for 2019-2021 Ram 1500

Part number: RS185

trailfortress.com/tow-hook-and-bezel-kit-ram-1500-rough-country-rs185

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

921RS1820

RAM 2019-2021 1500 FORGED TOW HOOK

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Dr. Forged Tow Hook x1
Pass. Forged Tow Hook x1
Dr. Tow Hook Bezel x1
Pass. Tow Hook Bezel x1

TOOLS NEEDED:
8mm Wrench
18mm Socket
22mm Socket

HARDWARE INCLUDED:
14mm x 40mm x2
9/16" Flat Washer x2




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS


1. Locate plastic bezel on the front bumper. **See Photo 1.** Use an 8mm wrench to remove the nut and stud from the plastic bezel. Retain hardware for reuse. **See Photo 2. NOTE:** Raising the vehicle is not necessary, but may ease installation process.



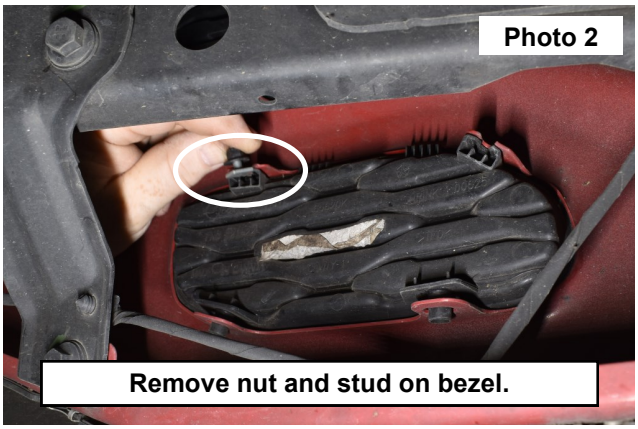


2. Remove plastic bezel from vehicle.
3. Remove plastic insert from bezel. **See Photo 3.** Reinstall supplied plastic bezel with factory hardware. **See Photo 4.**

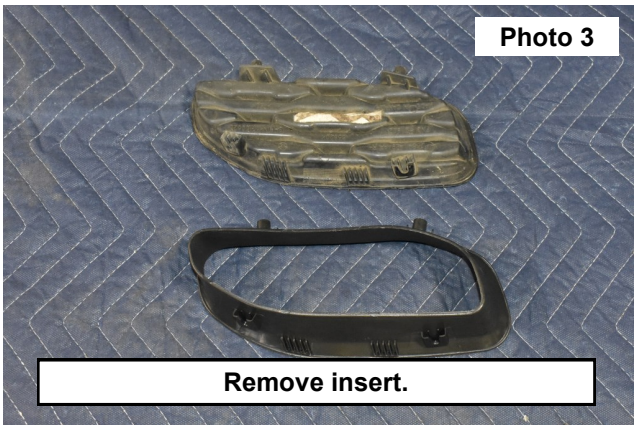

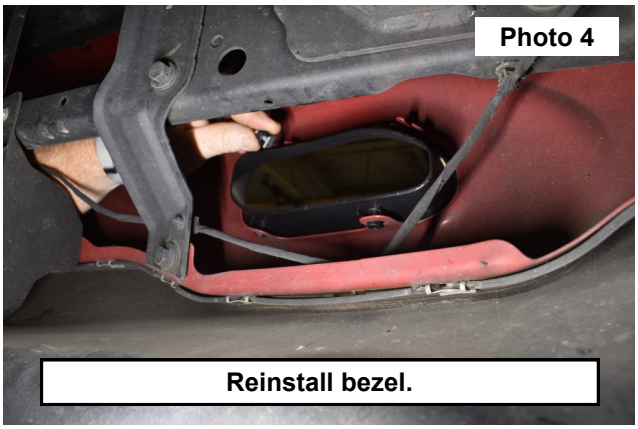



4. Locate frame bolt and washer. Remove with 18mm socket. Retain hardware for reuse. **See Photo 5.**
5. Install passenger side, **See Photo 6**, tow hook with factory hardware. Do not tighten at this time. **See Photo 7.**

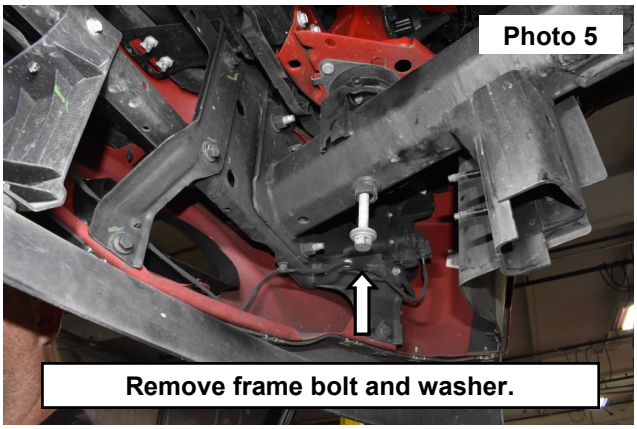



6. Install supplied 14mm x 40mm bolt and 9/16” flat washer into second frame hole. See Photo 8. Torque both bolts to spec.
7. Repeat Steps 1-6 for driver side of vehicle.

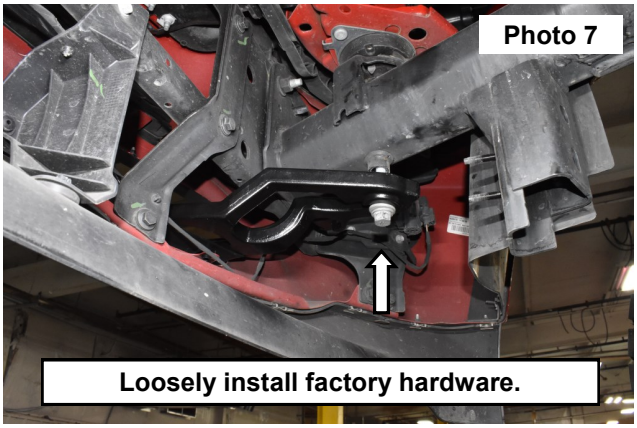

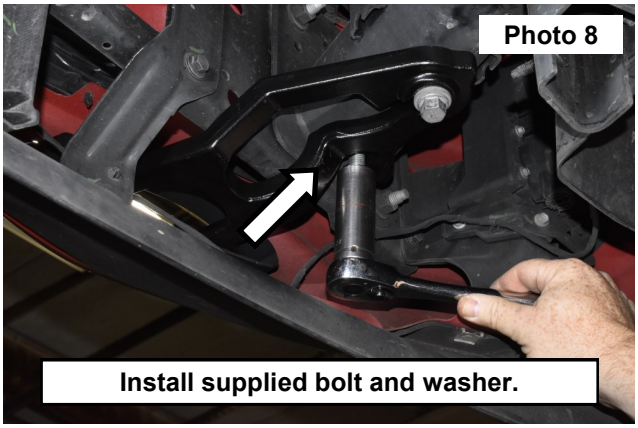





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.