TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Skyjacker 2205 Installation Instructions

ADX 2.0 Dual Stabilizer Kit for Jeep Wrangler JK

Part number: 2205

trailfortress.com/skyjacker-adx-2-0-cnc-machined-polished-aluminum-dual-stabilizer-kit-2205

Scan for fitment, price and install help

SKYJACKER SUSPENSIONS
SKYJACKER.COM

2007-2018 Jeep Wrangler JK 2-Door & 4-Door Unlimited 2WD/4WD Models

ADX High Clearance Dual Steering Stabilizer Kit Installation Instructions

Required Tools List:

- **SAE Sockets \ Wrenches** (1/2", 9/16", 3/4" & 11/16")
- **Metric Sockets \ Wrenches** (15mm, 17mm, & 18mm)
- **Adjustable Crescent Wrenches**
- **Adjustable Pliers**
- **Safety Glasses**
- **Wheel Chock**
- **Measuring Tape**
- **Torque Wrench**



Before beginning the installation, read these instructions thoroughly & completely. Please refer to the Parts List to insure that all parts & hardware are received prior to disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this product, contact SKYJACKER® Technical Assistance at 318-388-0816.

Important Notes:

- ONLY Fits Models Equipped with a Minimum of 2.5" of Lift to Maintain Proper Clearances.
- Does NOT Fit Stock Height Models.
- Does NOT Fit Aftermarket Axles with 3-Inch Diameter Tube.
- Steering Stabilizer Boots Are NOT Included.

Component Box Breakdown:
Part # 2205

Item #	Description	Qty
2208AS	ADX HD STEERING DAMPER, ALU	2
2205-MB	MAIN BRACKET, CENTER AXLE	1
ADXSD	DECAL, ADX 2.0 STABILIZER	2
HB-2205	HDWR BAG: 2205 ADX DUAL STAB.	1

Hardware Bag Breakdown:
Part # HB-2205

Item #	Description	Qty
HG5815-K	HOURGLASS, 5/8 X 1.5, BLACK	4
140629	EB6 STUD, BAG # 141397	4
2205-D	2205 DRIVER TIE ROD BRACKET	1
2205-FP	2205 FRONT PLATE BRACKET	1
2205-P	2205 PASSENGER TIE ROD BRKT	1
38X234X312U	3/8 X 2-3/4 X 3-1/2 U-BOLT, RD	2
38FSCTN	3/8 COURSE FLANGE NUT	4
516X112X214U	5/16 X 1-1/2 X 2-1/4 U-BOLT, RD	4
516FSCTN	5/16 COURSE FLANGE NUT	8

Pre-Installation Tips: Install Stabilizer Bushings.

1. Coat Hourglass Bushings with a water resistant grease & press into Each Stabilizer Eye. (Photo # 1 & # 2)

Photo # 1



Photo # 2

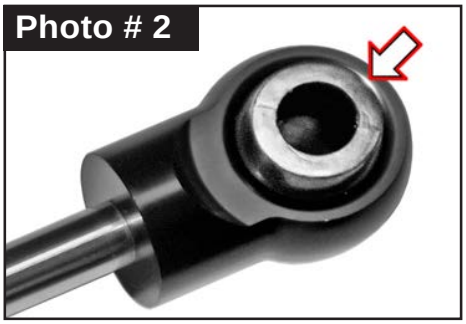

trailfortress.com/skyjacker-adx-2-0-cnc-machined-polished-aluminum-dual-stabilizer-kit-2205